

Panasonic

Operating Instructions

Colour Television

TC-33V30H

TC-29V30H

TC-25V30H

TX-33V30X

TX-29V30X

TX-25V30X

TX-33V30XE

TX-29V30XE

TC-29V30R

TC-25V30R

This is a combined Operating
Instruction manual for all the
above models.

Please read these instructions
completely before operating this
set and retain it for future reference.

Dear Panasonic Customer

Welcome to the Panasonic family of Customers.

We hope that you will have many years of enjoyment from your new colour television set.

To obtain the maximum from your new set, read these Instructions before making any adjustments and retain them for future reference.

AR(Anti-Reflection)Coating

The CRT screen is coated by a special material to hinder ambient light reflection and dust adherence.

Thereby, it realizes beautiful picture reproduction.

(The special coating renders the surface a purplish or bluish hue.)

How to Use This Manual	6
Quick Reference Guide for your TV Set	7

Connect the Aerial Cable to the RF In Terminal	8
Connect the Plug to the wall outlet	9
How to Turn the Power On	9
Battery Installation and Replacement	10
Battery precautions	10

Television Set	11
Remote Control Transmitter (TV)	12
Remote Control Transmitter (Teletext, VCR)	14
AV Terminals	16

How to connect: the S-Video and Audio Terminals	18
the Video and Audio Terminals	18
the Monitor Out Terminals	19
Connecting the Headphones	20
Connection Cable Arrangement (Only for TX-29/33V30 Series, TC-29/33V30 Series) ..	21

Automatic Search	22
Manual Search	24
Fine Tuning Operation	26
Fine Tuning Cancel Operation	27
Programme Number Skip Operation	28
How to Cancel the Skip Function	29
Programme Name Writing Operation	30

How to switch the power ON or OFF	32
Programme Number Selection	32
Direct Programme Number Selection	32
Two Digit Programme Number Selection	32
Volume Adjustment	34
TV/AV Selection	34
Display Button	34
AI Button	34
Off Timer Button	36
Mute Button	36
Recall Button	36
Sound System Selection	38
Colour System Selection	39

Stereo Reception	40
Picture and Sound Menu Selection	42
Feature Menu Operation (Picture and Sound)	44
Feature Menu Operation (VCR/GAME, NOISE TIMER, and P. NR)	46
Feature Menu Operation (Surround)	48
Picture in Picture Operation	51


Basic Operation	54
Text Sub Page Access	56
Text ALARM Page Access	58
List Mode Access	60
Fast Text (F. TEXT) Mode Access	62
Display Cancel Operation	63
Useful Function for Teletext (Hold, Reset and Mix)	64
Useful Function for Teletext (Favourite Page and Reveal)	65

Operation of a VCR	66
Warnings and Cautions	67
Troubleshooting	68
Troubleshooting Guide for Teletext Reception	69
Specifications	70

How to Use This Manual

First of all, please check the model number of your Remote Control Transmitter.

This manual applies to several models and there are slight differences among them. Please check the table below to see what your Remote Control Transmitter is equipped for, before you begin using these Operating Instructions.

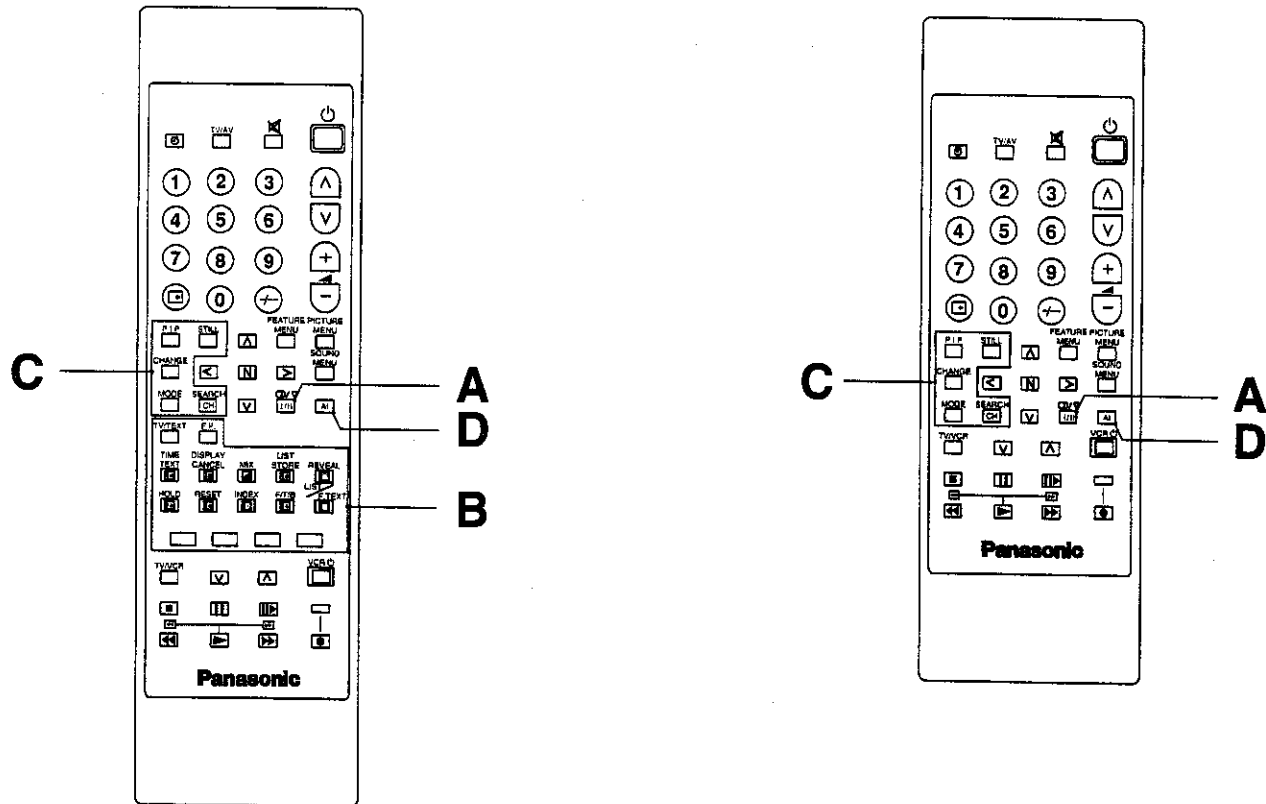

Supplied Remote Control Transmitter	Model No.	Feature			
		A	B	C	D
		Stereo	Teletext	Picture in Picture	AI
EUR50756	TX-33V30X TX-33V30XE	*	*	*	*
EUR50757	TX-29V30X TX-29V30XE	*	*		*
EUR50758	TX-25V30X	*	*		
EUR50707	TC-33V30H	*		*	*
EUR50708	TC-29V30H	*			*
EUR50709	TC-25V30H	*			
EUR50710	TC-29V30R				*
EUR50711	TC-25V30R				

*: Function available

Note:

Parts number of remote control transmitter is located on back side of transmitter.

Quick Reference Guide for your TV Set

Please check the model number of your TV set.

This manual applies to several models and there are slight differences among them.


Please check the table below to see what your TV is equipped with before you begin using these Operating Instructions.

Feature		Model No.	TC-33V30H	TC-29V30H	TC-25V30H	TC-29V30R	TC-25V30R	TX-33V30X	TX-29V30X	TX-25V30X	TX-33V30XE	TX-29V30XE	
TV Operation		*	*	*	*	*	*	*	*	*	*	*	TV Operation
AI		*	*		*		*	*		*	*	*	AI Operation
Stereo	NICAM	*	*	*			*	*	*				Stereo Operation
	A2 (German)						*	*	*	*	*	*	
	MONO				*	*							
Picture in Picture		*					*			*			Picture in Picture Operation
Teletext							*	*	*	*	*	*	Teletext Operation
Tuner	MULTI	*	*	*	*	*	*	*	*	*	*	*	Specifications
	OSCAR									*	*	*	
Power Source	WIDE (AC 110-240 V)	*	*	*	*	*	*	*	*	*	*	*	
	SINGLE (AC 220 V)										*	*	
Audio Output	12 W×2	*	*		*		*	*		*	*	*	
	7 W×2			*		*			*				

*: Function available

In this manual, the instructions are given for the model with maximum functions.
Please disregard information in this manual which does not apply to your TV.

Connect the Aerial Cable to the RF In Terminal

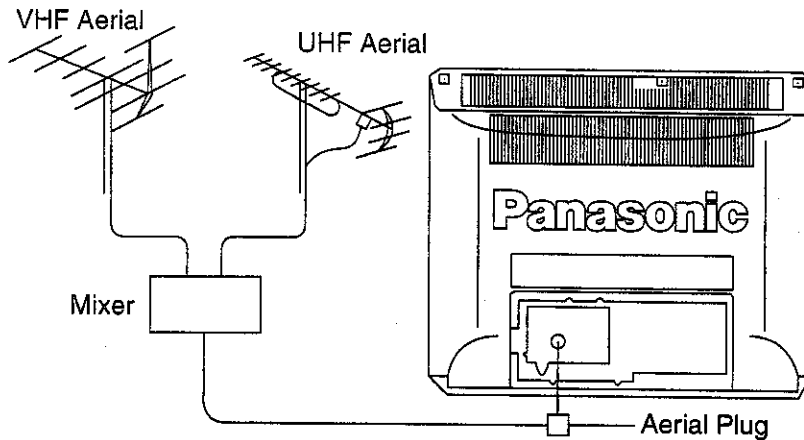


To obtain the optimum quality picture and sound, an Aerial, the correct cable (75 Ohm coaxial) and the correct terminating plug will be required.

If a communal Aerial system is used, you may require the correct connection cable and plug between the wall Aerial socket and your television receiver.

Your local Television Service Centre or Dealer may be able to assist you in obtaining the correct Aerial system for your particular area and any accessories required.


Any matters regarding Aerial installation, upgrading of existing systems or accessories required, and the costs incurred, are the responsibility of you, the customer.

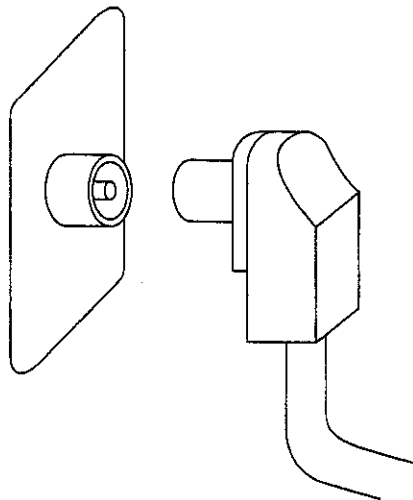

75 Ohm Coaxial Cable

Before Operating This Set


Connect the Plug to the wall outlet

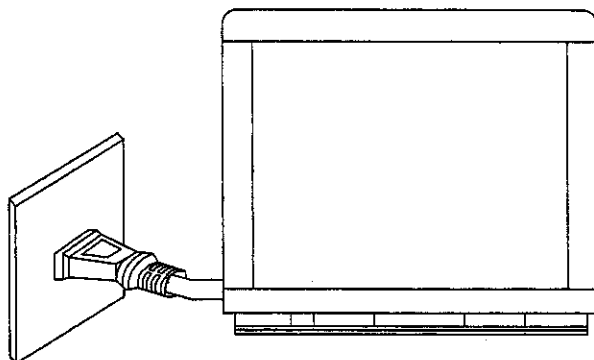

(e.g. A2 Type Plug)

For Power Source details, refer to page 7.

How to Turn the Power On

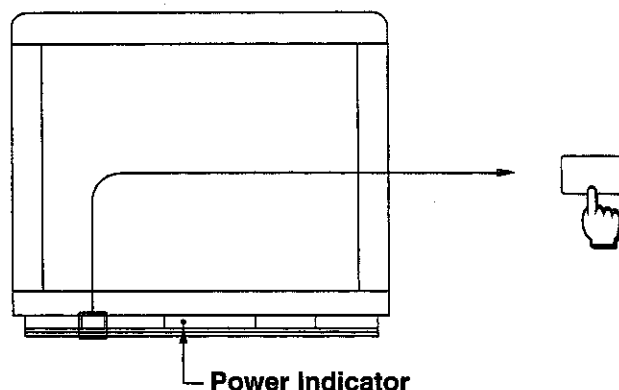


Push the Power switch on the Television to turn the set on.

The Power Indicator will light.

Note:

When in the stand-by condition, it is possible to turn the TV set on by pushing the "Power (Stand-by)" Button, any of the "Direct Programme Number Selection" Buttons (0-9) and Programme Number Up and Down Buttons on the TV set or Remote Control Transmitter.

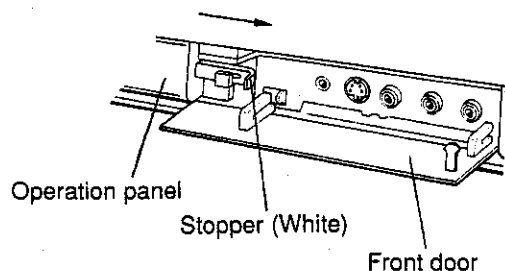


Note:

To open the operation panel, remove the stopper inside the front door first.

Battery Installation and Replacement


1

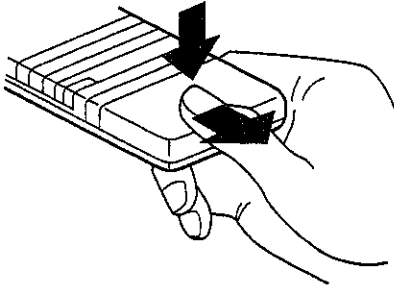

Open the cover.

A slight downward pressure while pulling towards the bottom will ensure easy removal.

2

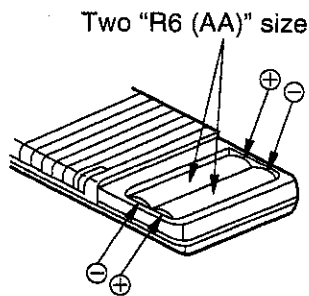


Batteries: Use two "R6 (AA)" size batteries.

Replace the batteries.

Insert the batteries ensuring the correct polarity is obtained. This is identifiable by the "+" and "-" symbols on both the batteries and inside the Remote Control Transmitter Battery compartment.

3

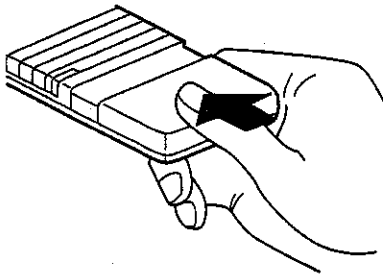

Replace the cover.


Do not use rechargeable (Ni-Cd) batteries.

They are partially different in shape and performance and may fail to ensure the correct operation.

Battery precautions

The incorrect use of batteries can cause electrolyte leakage which will corrode the remote control transmitter or cause the batteries to burst. The following precautions must be observed carefully.


Old Batteries

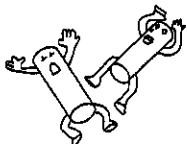


New Batteries



Replace both batteries at the same time.

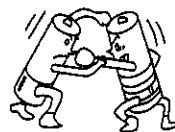

 
Don't mix battery types
(alkaline with carbon zinc, etc.)



Don't Recharge.


Location of Controls

Television Set

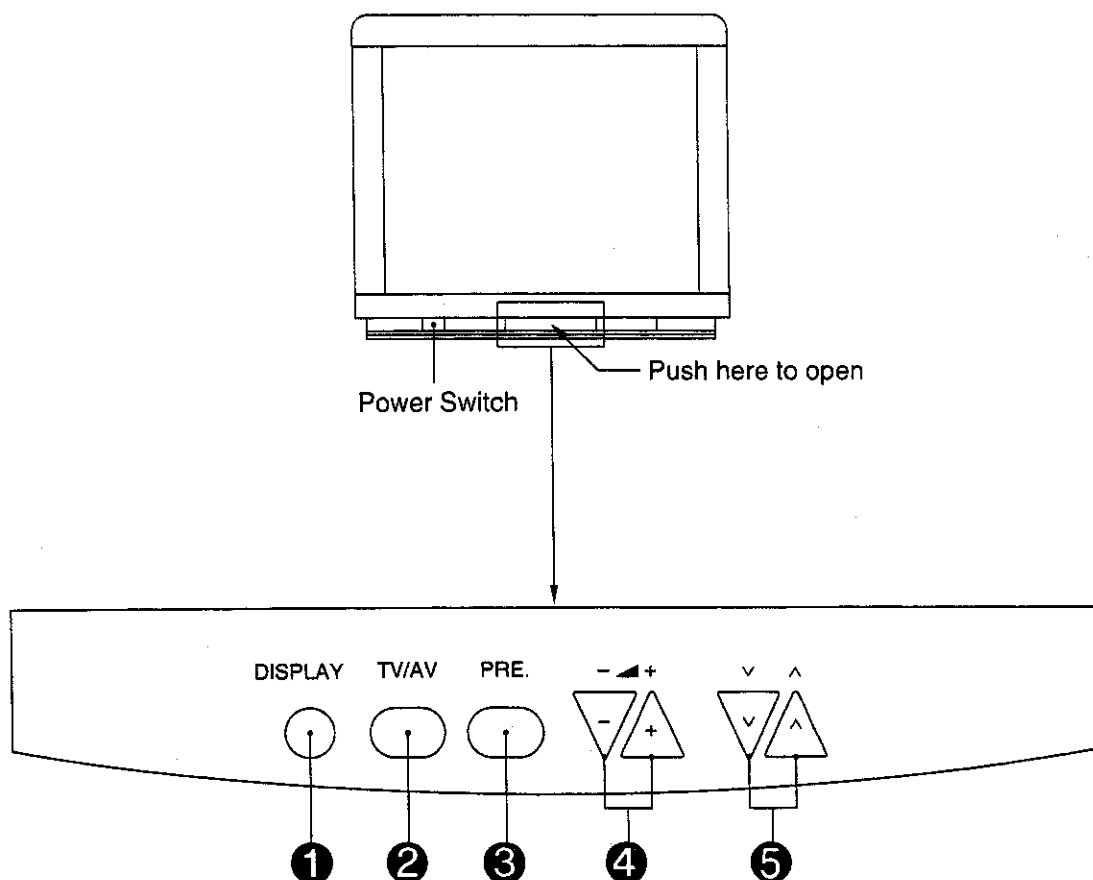





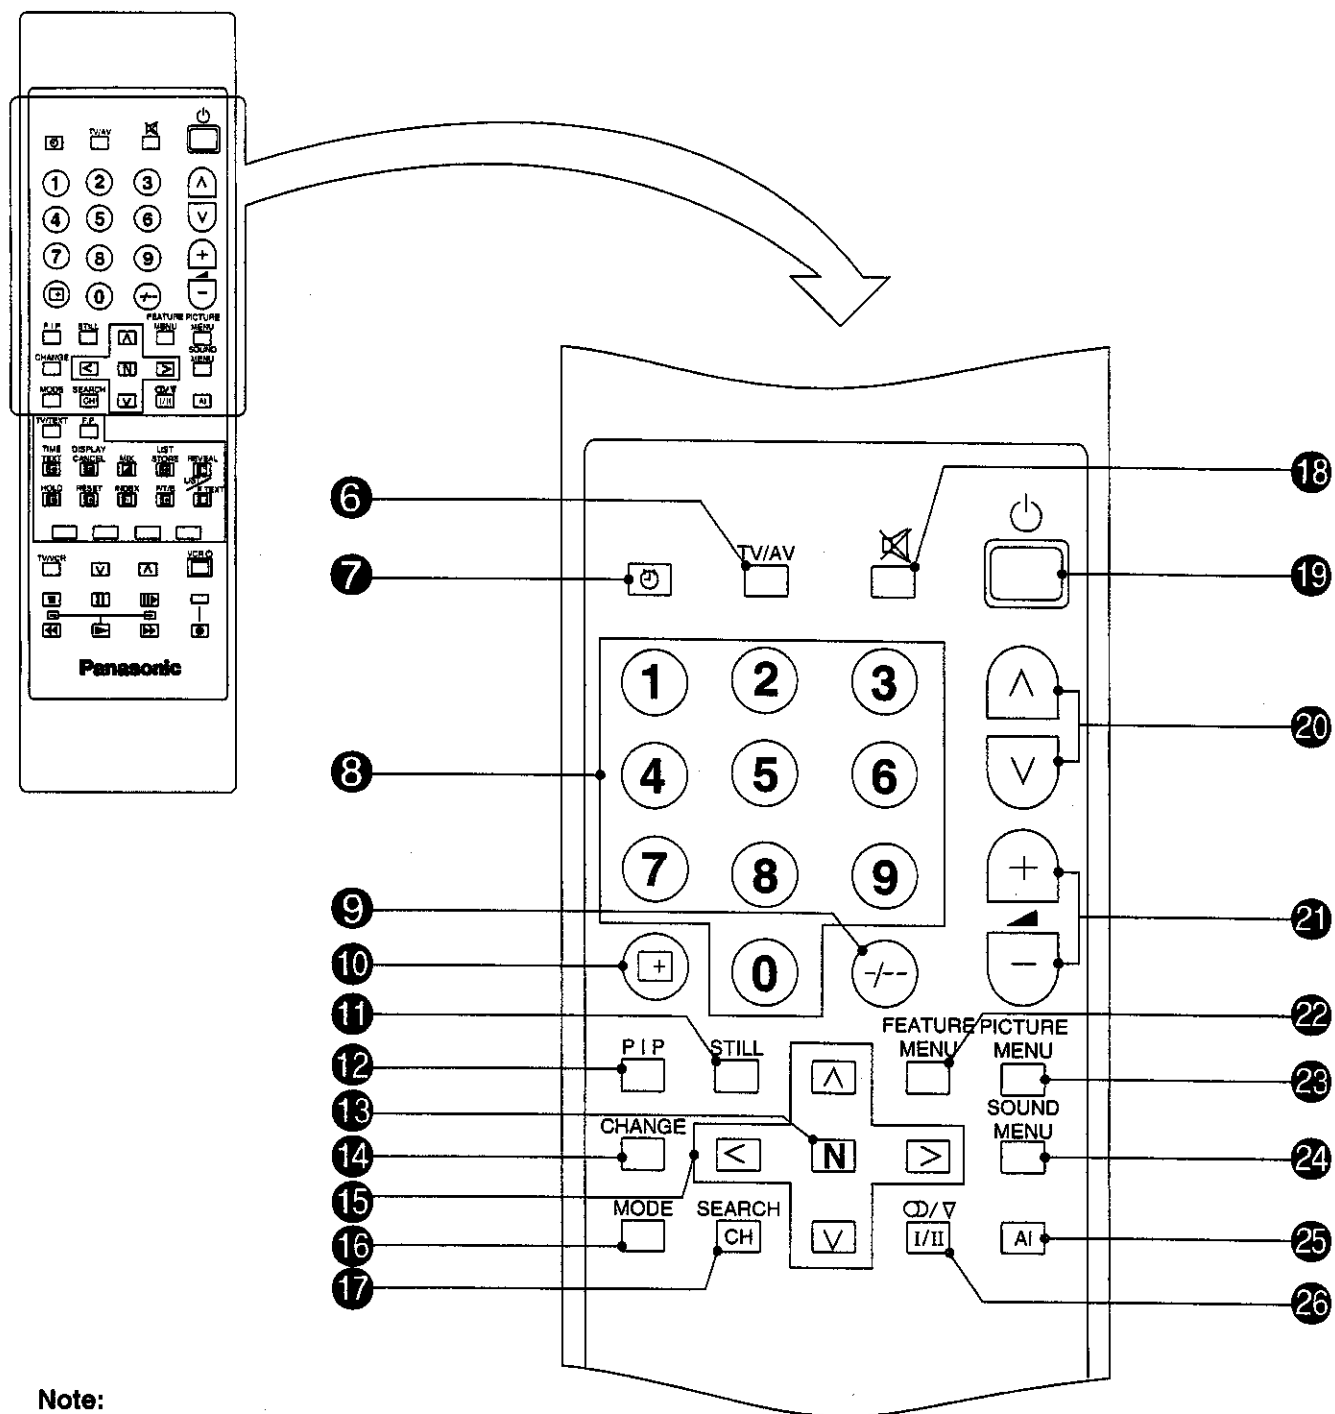


 

 

 
 
 
 





Item No.	Key	Function	Refer to Page
1	DISPLAY 	Display Button	34
2	TV/AV 	TV/AV Selection Button	34
3	PRE. 	Preset Button	22
4		Volume Up and Down Buttons	34
5		Programme Number Up and Down Buttons	32

 Remote Control Transmitter (TV)













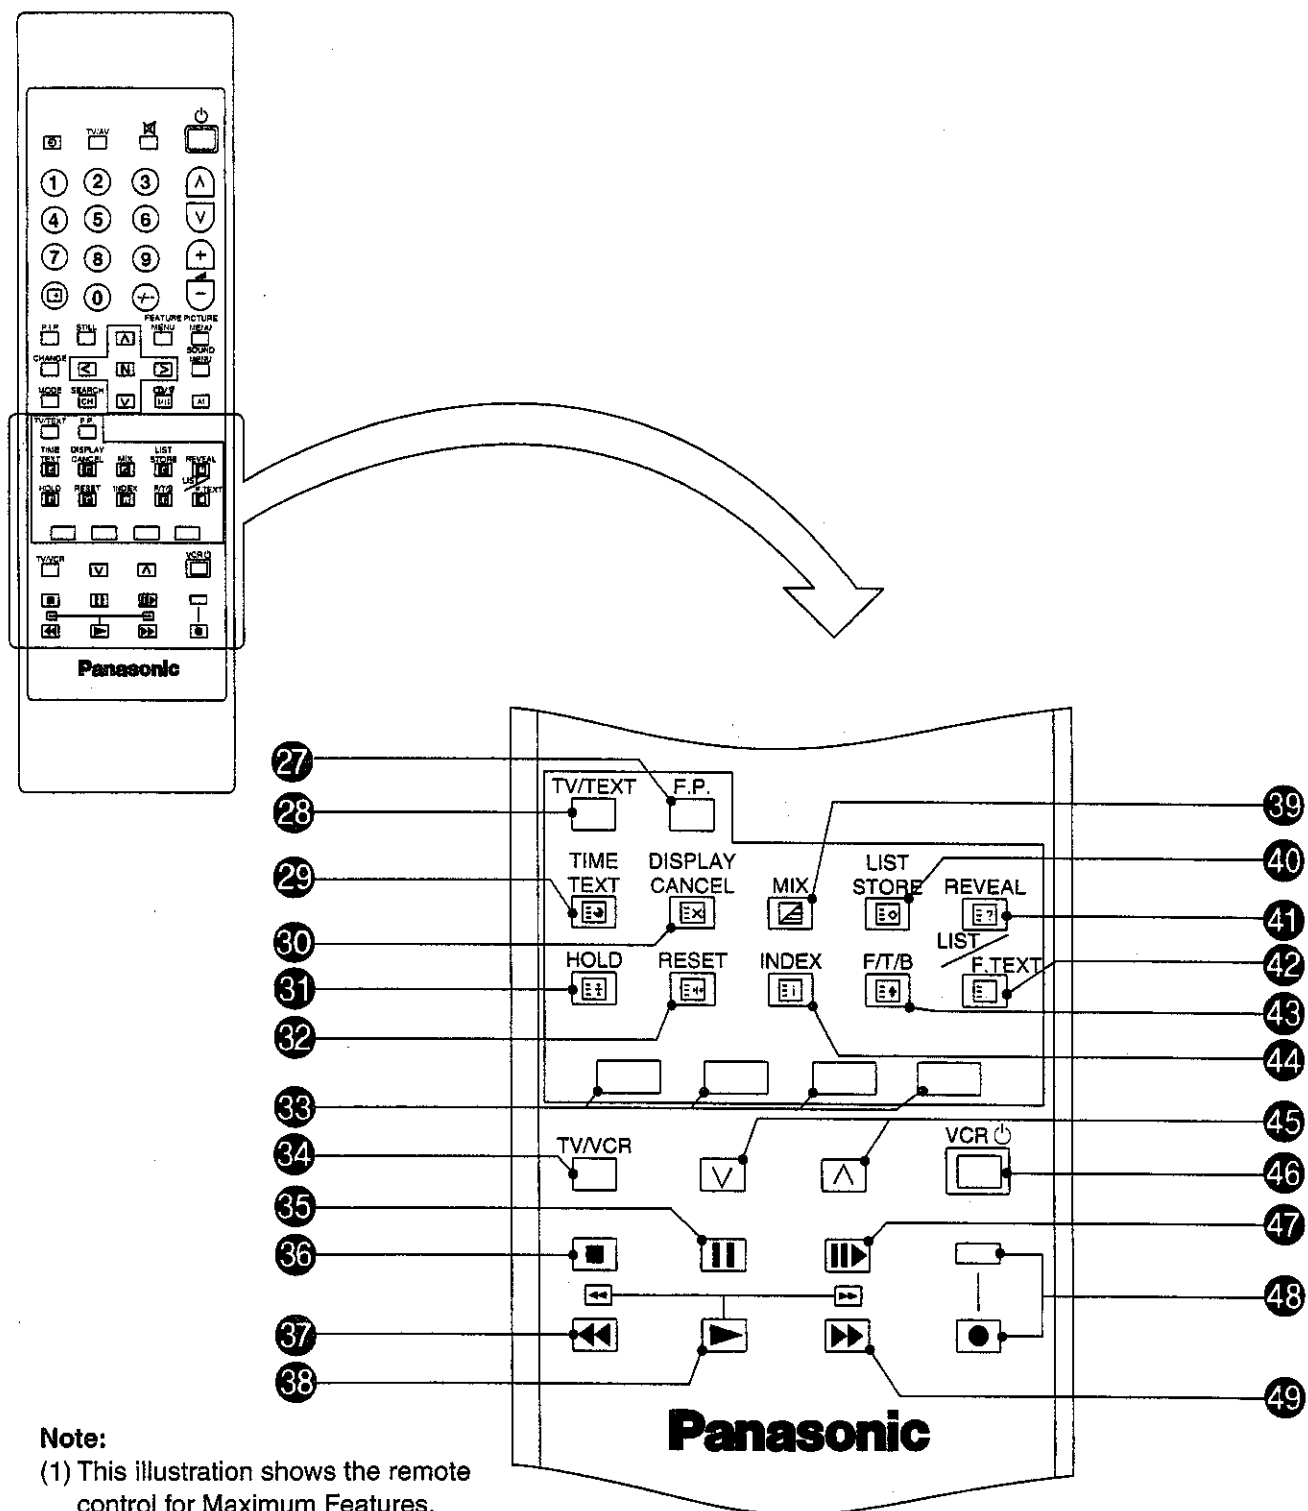




 
 

 
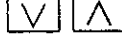


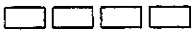

Note:

- (1) This illustration shows the remote control for Maximum Features.
(Remote Control No. EUR50756)
- (2) The buttons shaded are not present for models not equipped with certain features.


Item No.	Key	Function	Refer to Page
6	TV/AV 	TV/AV Selection Button	34
7		OFF Timer Button	36
8	0 1 ... 9	Direct Programme Number Selection Buttons	32
9		Two Digit Programme Numbers Button	32
10		Recall Button	36
11	STILL 	Still Button	52
12	PIP 	Picture in Picture Button	52
13	N 	Normalisation Button	44
14	CHANGE 	Change Button	52
15		Position Buttons	44
16	MODE 	Mode Selection Button	52
17	SEARCH CH 	Channel Search Button	52
18		Mute Button	36
19		Power (Stand-by) Button	32
20		Programme Number Up and Down Buttons	32
21		Volume Up and Down Buttons	34
22	FEATURE MENU 	Feature Menu Button	44
23	PICTURE MENU 	Picture Menu Button	42
24	SOUND MENU 	Sound Menu Button	42
25	AI 	AI ON/OFF Button	34
26	CD/V I/II 	Stereo/Bilingual Sound Selection Button	40

Remote Control Transmitter (Teletext, VCR)




Item No.	Key	Function	Refer to Page
27	F.P. 	Favourite Page Selection Button	65
28	TV/TEXT 	TV/TEXT Selection Button	54
29	TIME TEXT 	Time Text Button	56
30	DISPLAY CANCEL 	Display Cancel Button	56, 58, 63
31	HOLD 	Hold Button	64
32	RESET 	Reset Button	64
33		Colour-coded Buttons	60, 62
34	TV/VCR 	TV/VCR Selection Button	66
35		Pause Still Button	66
36		Stop Button	66
37		Rewind/Review Button	66
38		Play Button	66
39	MIX 	Mix Button	64
40	LIST STORE 	List Store Button	60
41	REVEAL 	Reveal Button	65
42	LIST/F. TEXT 	LIST/F. TEXT Button	60, 62
43	F/T/B 	Full/Top/Bottom Button	54
44	INDEX 	Index Button	54
45		Programme Number Up and Down Buttons for VCR	66
46	VCR 	VCR Power Button	66
47		Still Advance Button	66
48		Record Buttons	66
49		Fast Forward Button	66

AV Terminals

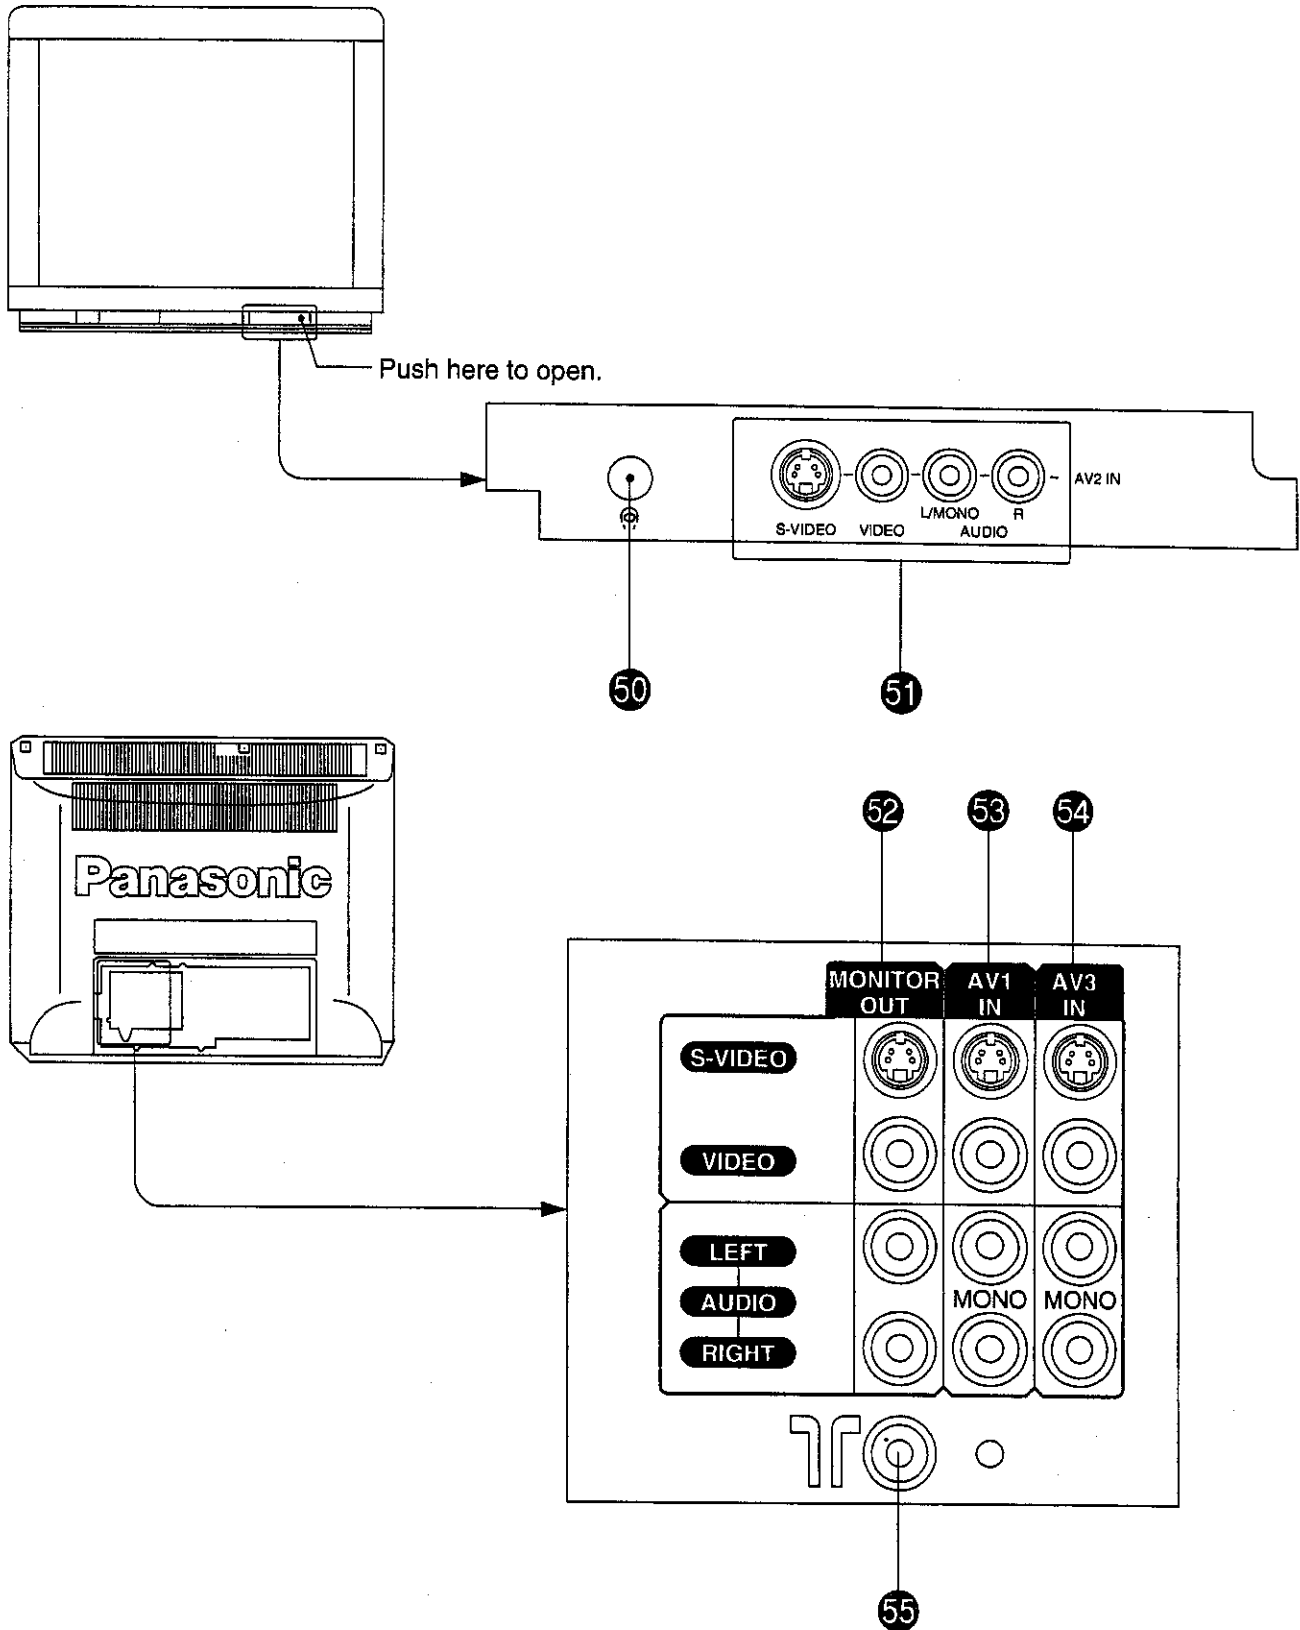


Reference No.	Description	Refer to Page
50	Headphones Jack	20
51	AV2 Input Terminals	18
52	Monitor Output Terminals	19
53	AV1 Input Terminals	18
54	AV3 Input Terminals	18
55	Aerial Terminal	8

How to connect the "AV1, 2 or 3" (S-Video and Audio) Terminals with other equipment.

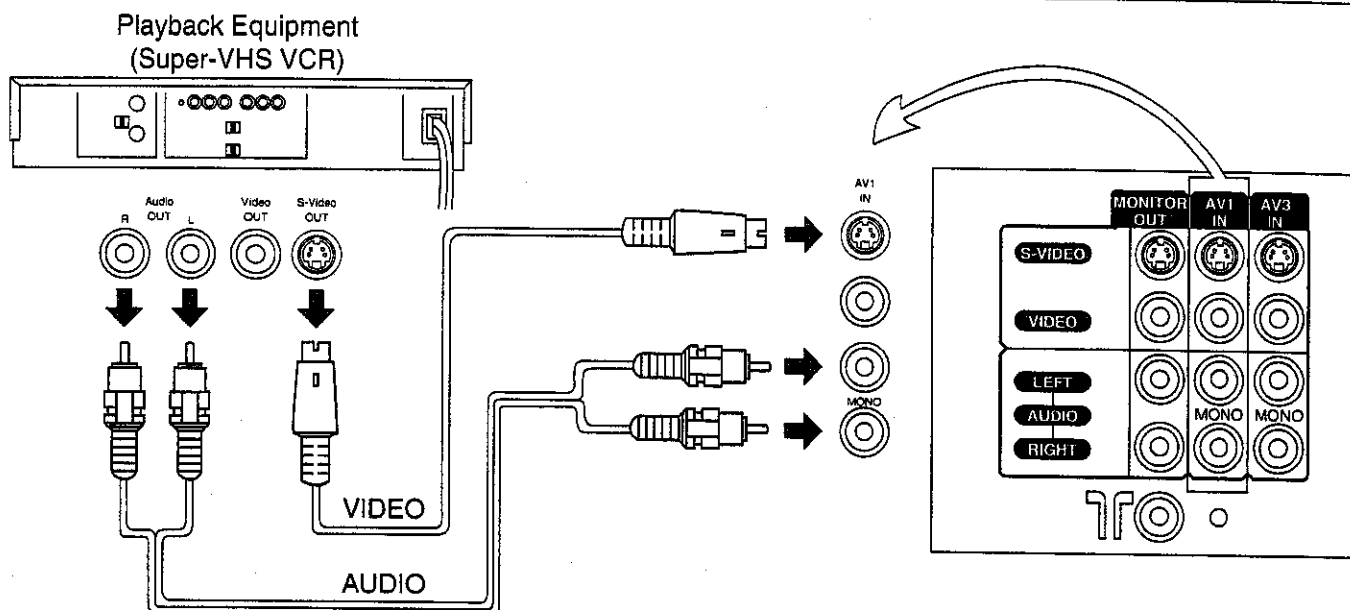

How to connect the "AV1, 2 or 3" (Video and Audio) Terminals with other equipment.

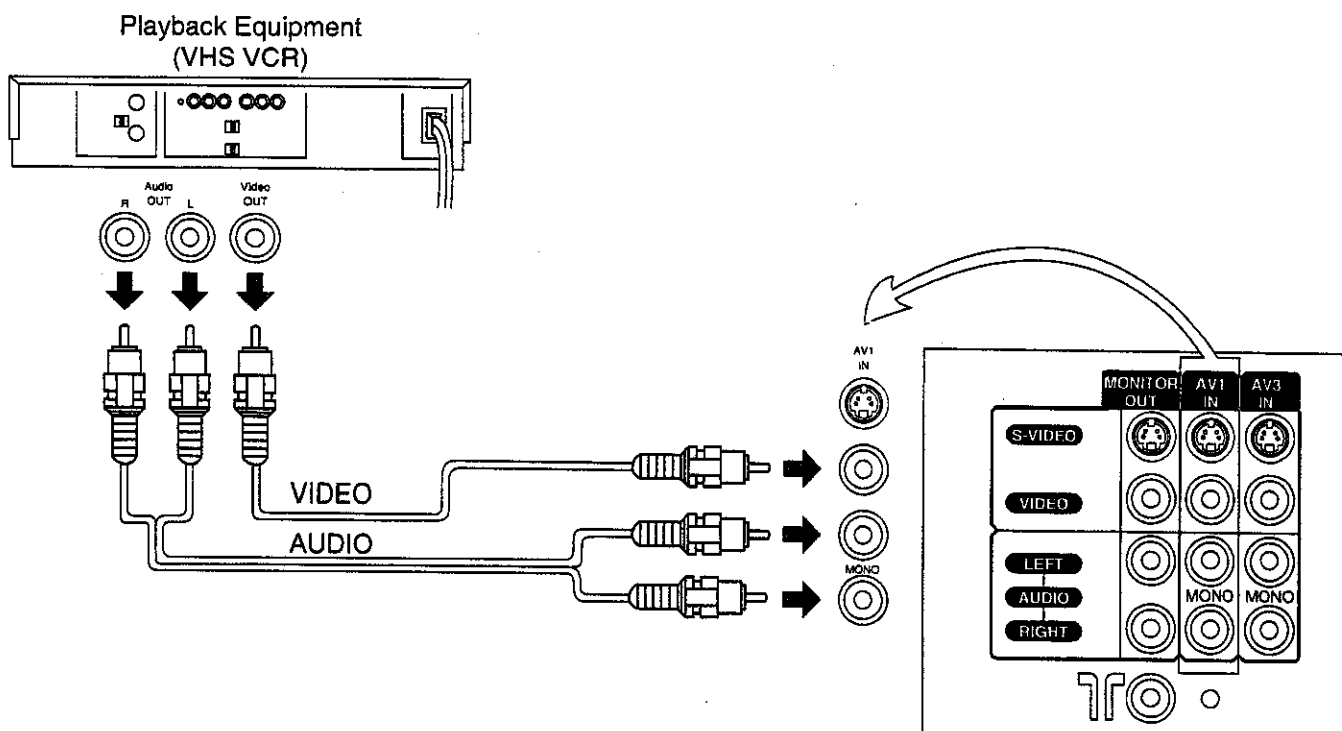


Note:

- (1) When an AV mode (AV1, AV2 or AV3) is selected, and the selected AV mode has no input signal, the Background Colour of the TV screen will change. (Refer to page 39 for details of the Colour System.)
- (2) When the S-Video cable is connected to the S-Video terminal, the Phono Video Input will be automatically switched off for that AV mode.
- (3) When a Monaural VCR is used, connect the Monaural Audio cable to the Audio "L" (Left) terminal.
- (4) Connections are available at AV IN 1, 2, 3 positions.
Select the desired AV input position by pushing the TV/AV button.

Connections

How to connect "Playback" Equipment and "Recording" Equipment with the TV set.

The "Monitor Out" Terminals contain signals which are on the TV screen at that time, e.g. TV programmes or signals from AV2 or AV3 input.

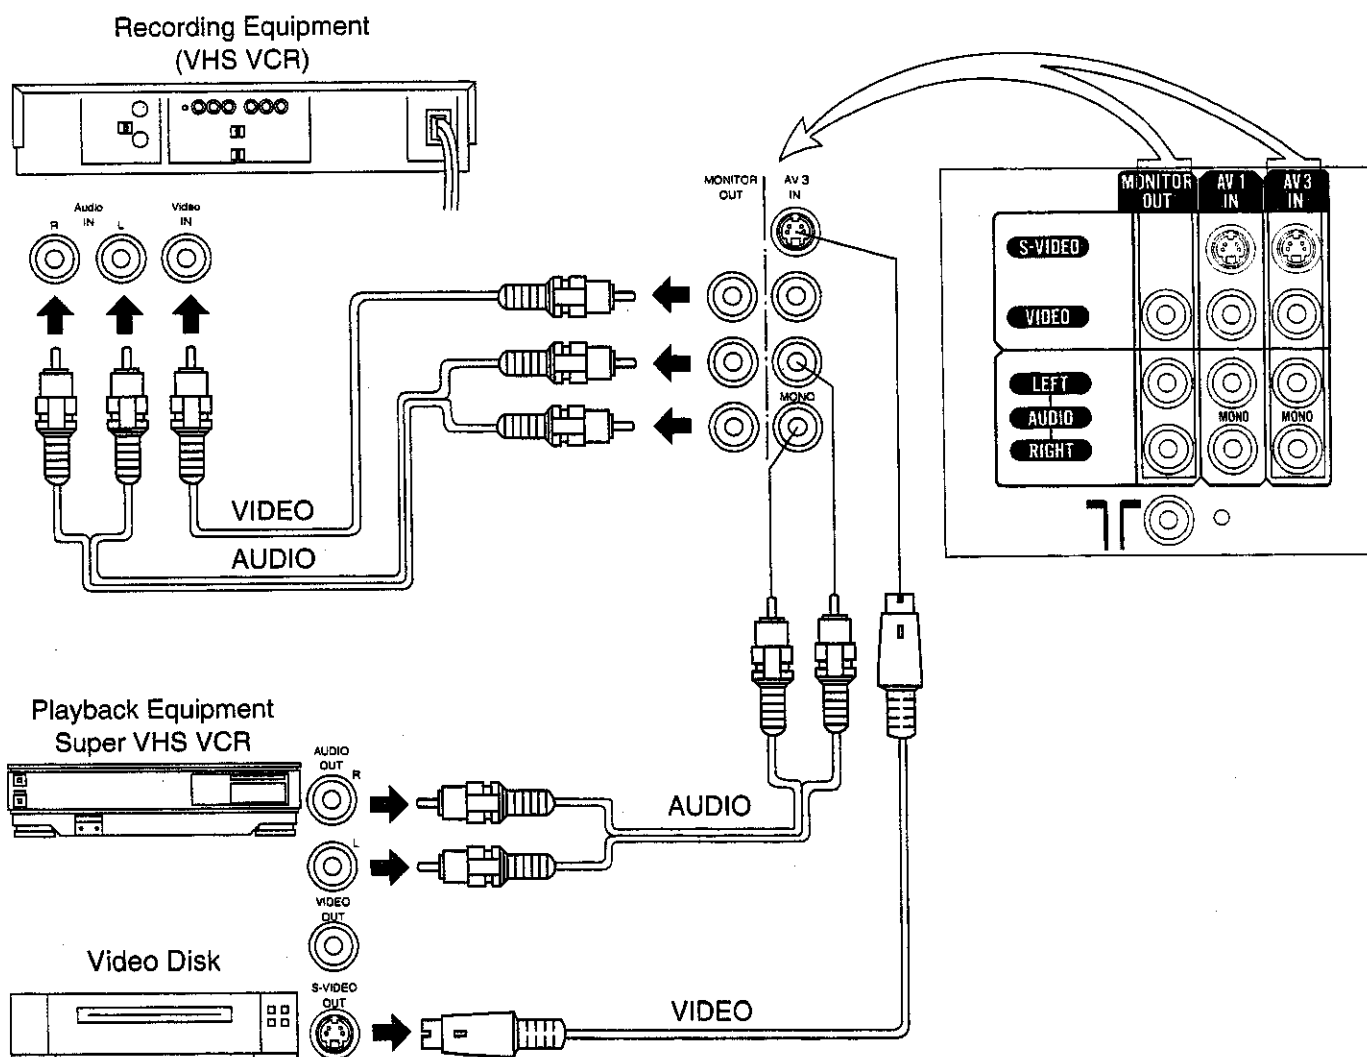

Playback Operation

1. Select the desired AV mode. In the case illustrated above, the AV3 mode.
2. Push the "PLAY" Button on the connected Playback Equipment.


Note:

1. Never connect the same video recorder with both the VIDEO IN and VIDEO OUT Terminals on this TV set, as this could cause incorrect operation.
2. When connecting with a VCR having a built-in S-Video terminal, S-Video monitor signal will not be outputted.
3. AV1 Input signals will not be outputted.
4. Picture in Picture signals will not be outputted.

Connecting the Headphones

Connect headphones as follows.


When a Headphones plug is inserted into the Headphones socket all speakers will be automatically disconnected; only the Headphones will function.

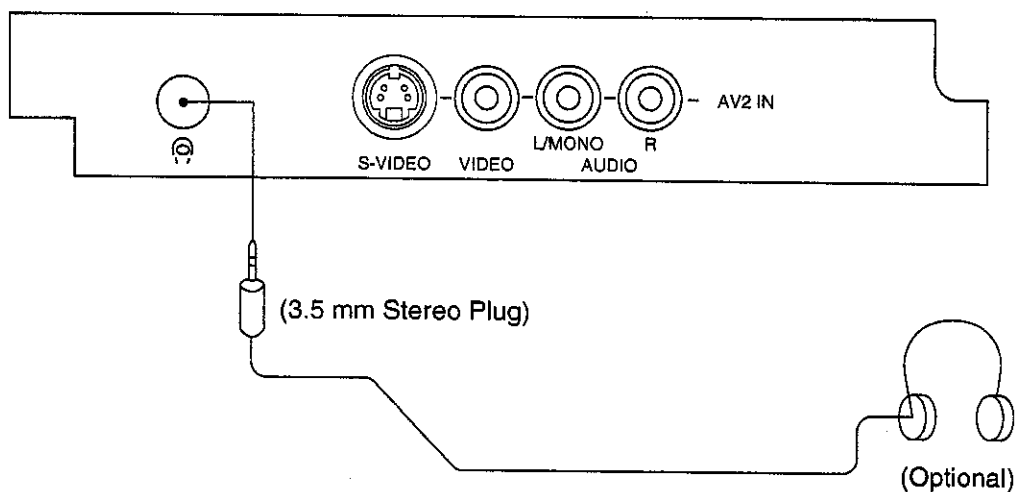


Connection Cable Arrangement (Only for TX-29/33V30 Series, TC-29/33V30 Series)

The cables, after being connected, can be arranged in one of three basic ways.


- 1 This method is suitable for a moderate number of cables.

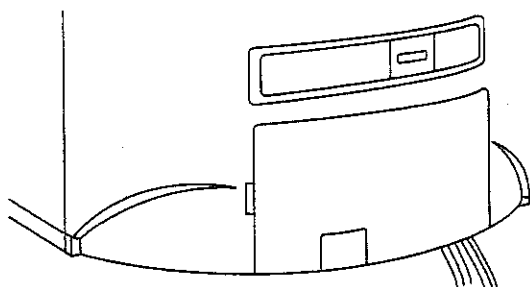


- 2 This method may be used for a smaller number of cables.

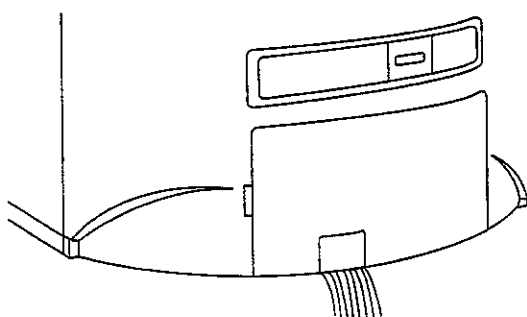

- 3 Detatch the clip-out piece to accommodate the maximum number of cables.

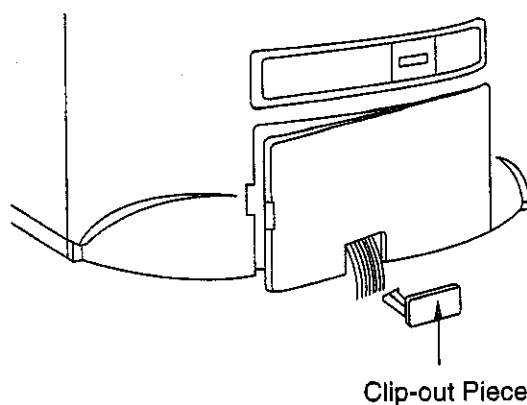


Automatic Search

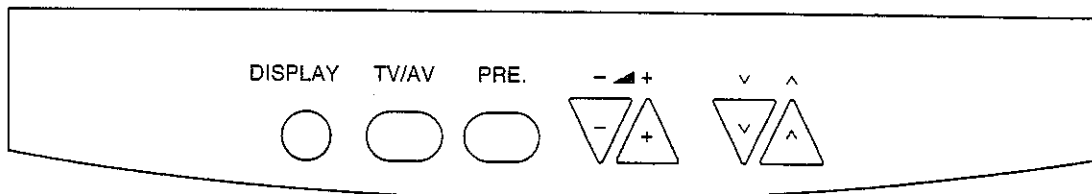

This TV set will search automatically through all of the VHF and UHF bands. After completion, the best tuning position is automatically memorized on each Programme Number sequentially.

1


PRE. 

Push the "PRE." (PRESET) Button.

1	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH_ _
	FINE TUNE	
		<input type="text"/>

Automatic Search (AUTO TUNE) Condition.

2



Push the Volume Up "+" or Down "-" Button.

1	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH_ _
	FINE TUNE	
		<input type="text"/>


Search Start.

↓

1	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH_ _
	FINE TUNE	
		Panasonic

The best tuning position is automatically memorized.

3




After all stations are tuned, the on-screen display will automatically change from "AUTO TUNE" to "SOUND SYS" Position. Confirm the sound condition of each Programme Number Position by using the Programme Number Up "^" Button.

If the Sound is not clear or no sound is produced on a Programme Number Position, then follow the next step, Step 4.

4	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH_ _
	FINE TUNE	

Tuning Procedure

 4



If necessary, push the Volume Up "+" or Down "-" Button, to improve the Sound quality.

4	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	6.0MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH _ _
	FINE TUNE	

The sound indicator will change as follows.

→ 4.5MHz ↔ 5.5MHz ←
→ 6.5MHz ↔ 6.0MHz ←

5




Use the Programme Number Up "^" button to sequentially check each station.
If necessary, repeat step 4 for each Programme Number Position.

6




After all stations are tuned, push the "PRE." (PRESET) Button four times.

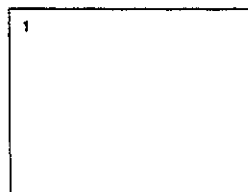


This returns the set to the normal viewing condition. A maximum of 29 channels can be programmed.

Helpful Hint

 - (1) If a clear picture cannot be obtained even when a Broadcast or AV signal is received, refer to the "Colour system selection" Operation on page 39.
- (2) After the Automatic Search is finished, push the Programme Number "Up" Button to confirm the tuning condition for each Programme Position. If a Programme Position is unused, it is possible to skip such Programme Numbers.
Please refer to the Programme Number Skip Operation on page 28.
- (3) If you would like the station name on the screen display together with the Programme Position, refer to the Programme Name Writing Operation on pages 30 and 31 for operation details.
- (4) You can select the desired menu.
Preset Menu will change as follows.




Manual Search

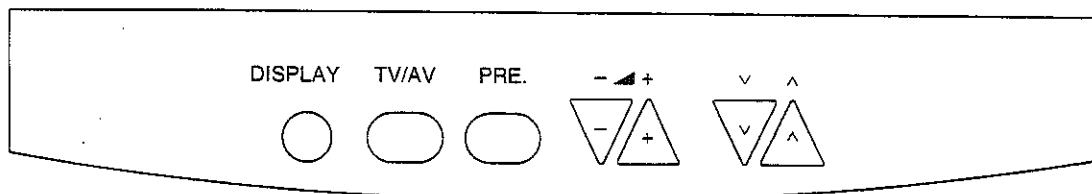

1



Push either the Programme Number Up "▲" or Down "▼" Button.

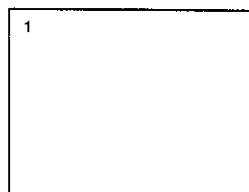


Select the desired Programme Position.

2




Push the "PRE." (PRESET) Button twice.

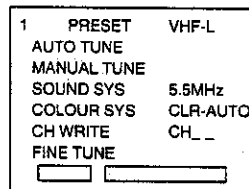

Manual Search Condition.

 
3




Push the Volume Up "+" or Down "-" Button.

Volume "+": Next higher Channel

Volume "-": Next lower Channel

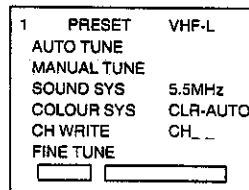

Search Start.

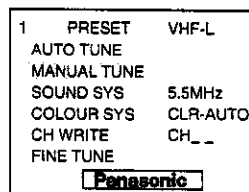


The best tuning position is automatically memorized.

4




Push the "PRE." (PRESET) Button.

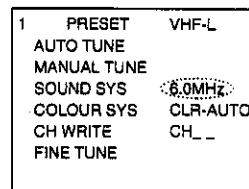

Sound System Condition.

 5




If the sound is not clear or no sound is produced on a Programme Number Position, push the Volume Up "+" or Down "-" Button.

1	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	8.0MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH _
	FINE TUNE	

You may improve the Sound quality.

 The sound indicator will change as follows.




6

PRE.



Push the "PRE." (PRESET) Button 4 times.

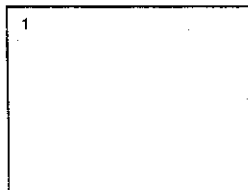


This returns the set to the normal viewing condition.

Helpful Hint

- (1) If a clear picture cannot be obtained even when a Broadcast or AV signal is received, refer to the "Colour system selection" Operation on page 39.
- (2) After the Manual Search is finished, push the Programme Number "Up" Button to confirm the tuning condition for each Programme Position. If a Programme Position is unused, it is possible to skip such Programme Number. Please refer to the Programme Number Skip Operation on page 28.
- (3) If you would like the station name on the screen display together with the Programme Position, refer to the Programme Name Writing Operation on pages 30 and 31 for operation details.

Fine Tuning Operation

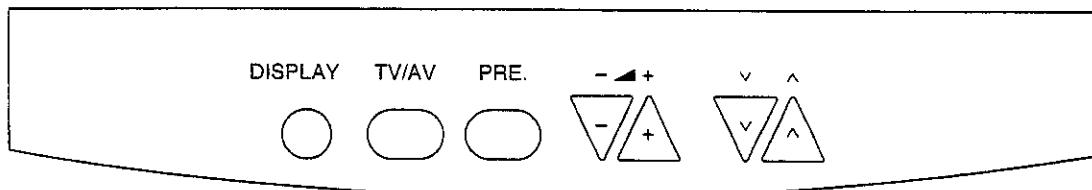


Under normal reception conditions this function is not used.

However, in areas of poor reception or constant interference, a slight adjustment of the tuning may improve the picture and sound quality.

1



Select the channel which you want to improve.

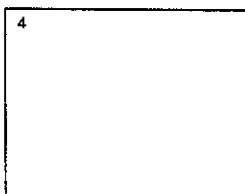


Select the desired Programme Position.

2




Push the "PRE." (PRESET) Button 6 times.

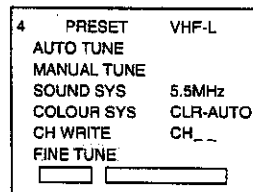


Fine Tune Condition.

 
3



Push and hold the Volume Up "+" or Down "-" Button until the clear picture is received.

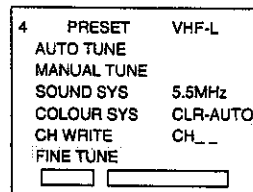

Fine Tune Start.

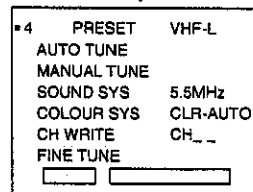


The AFC function is deactivated.
The "■" symbol appears to the left of the Programme Number.

4




Push the "PRE." (PRESET) Button.

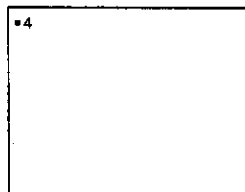

This returns the set to the normal viewing condition.

Fine Tuning Cancel Operation

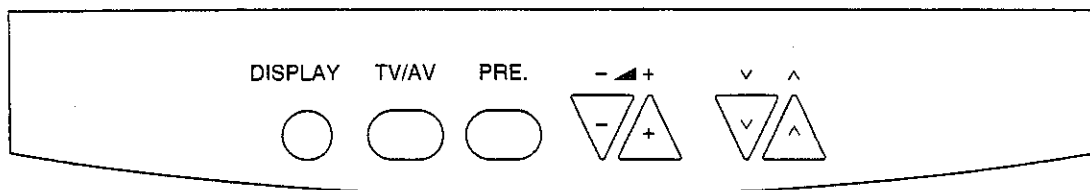


Activating the AFC (Automatic Frequency Control) Function.

1



Select the "AFC OFF" Programme Number which you want to cancel.

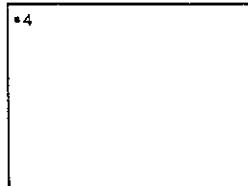


When the "AFC OFF" Programme Number is selected, the "■" symbol appears to the left of the Programme Number.

2




Push the "PRE." (PRESET) Button twice.

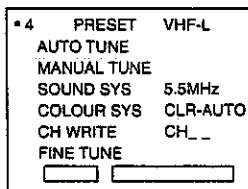


Manual Search Condition.

 3



Push the Volume Up "+" or Down "-" Button, briefly.

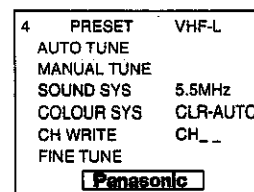


The best tuning position is automatically memorized.

4




Push the "PRE." (PRESET) Button 5 times.

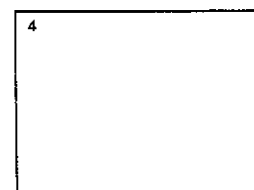


This returns the set to the normal viewing condition.

Programme Number Skip Operation

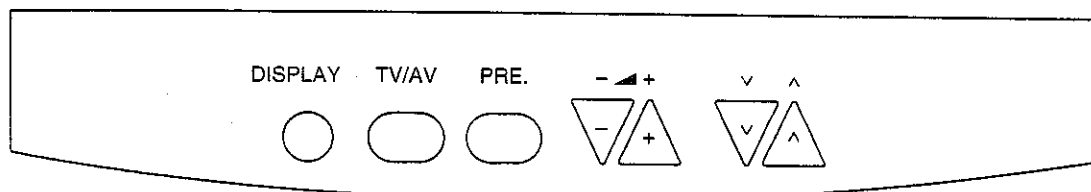

This function makes it possible to skip Programme Numbers on which no TV stations are tuned. This function is only effective when selecting TV stations by pushing the Programme Number Up or Down Buttons either on the TV set or the Remote control.


- 1**



Push the "PRE." (PRESET) Button 5 times.


4	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH
	FINE TUNE	

Channel Write Condition.
- 2**



Select a Programme Number you want to skip.

4	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH
	FINE TUNE	
- 3**

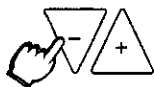


Push the Volume Down "-" Button.

4	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH
	FINE TUNE	


↓

4	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	SKIP
	FINE TUNE	

The on-screen indicator will change from "CH_" to "SKIP".
The SKIP function is now set.
- 4**




Repeat Steps 2 and 3 for the remaining Programme Numbers for which the Skip function is desired.
- 5**




After the Skip Operation is completed, push the "PRE." (PRESET) Button twice.

This returns the set to the normal viewing condition.

How to Cancel the Skip Function

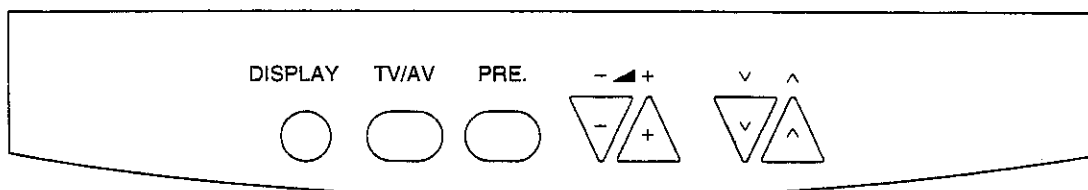


1

 Push the "PRE." (PRESET) Button 5 times.

Channel Write Condition.

4	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH _ _
	FINE TUNE	


2

 Select the skipped Programme Number.

The "SKIP" indicator will appear on the screen.

4	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	SKIP
	FINE TUNE	


3

 Push the Volume Up "+" Button.


The on-screen indicator will change from "SKIP" to "CH _ _".
The skip function is now cancelled.

4	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH _ _
	FINE TUNE	

4


 Repeat Steps 2 and 3 for the remaining Programme Position, if you wish to cancel the skip function on any other Programme Number Positions.

5

 After the Skip Cancel Operation is completed, push the "PRE." (PRESET) Button twice.

This returns the set to the normal viewing condition.

Programme Name Writing Operation

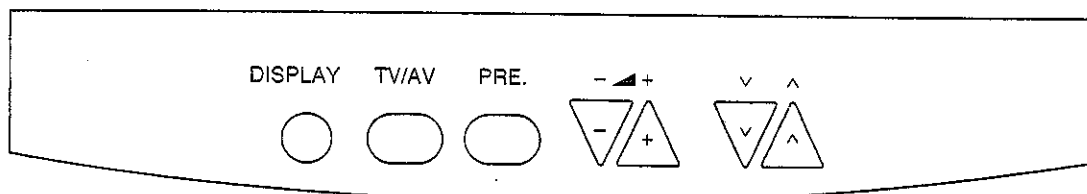

This function is used, if you want to write a Programme Name on each Programme Number. The programme Name will be displayed under the Programme Number. You can understand easily which TV Programme is now received, by adding a Programme Name.

1

PRE.



Push the "PRE." (PRESET) Button 5 times.

7	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH _ _
	FINE TUNE	

Channel Write Condition.

2



Select the Programme Number, for which you wish to add a Programme Number.

7	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH _ _
	FINE TUNE	

3




By pushing this button, you can select one of the four character positions.

7	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH _ _
	FINE TUNE	

Each time this button is pushed, the next character position selected will be flashing.

CH _ _ Flashing

 4



Select your desired character by pushing these buttons. Repeat Step 3 to select the next character position.

7	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	ABC _
	FINE TUNE	


When the left hand character is flashing, the character will be changed as follows.

→ 0 ↔ 1...9 ↔ A...Z ↔ - ↔
→ CH _ _ ↔ SKIP ←

When the 2nd, 3rd, or 4th characters are flashing, the character will be changed as follows.

→ 0 ↔ 1...9 ↔ A...Z ↔ - ↔

5

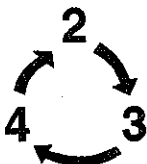

Repeat Steps 2 through 4
for the remaining
Programme Positions, for
which you wish to add a
programme Number.

6

PRE.




After the Programme Name
Writing Operation is
completed, push the "PRE."
(PRESET) Button twice.

7
ABCD
CLR-AUTO
5.5MHz

This returns the set to the
normal viewing condition.

General Operation

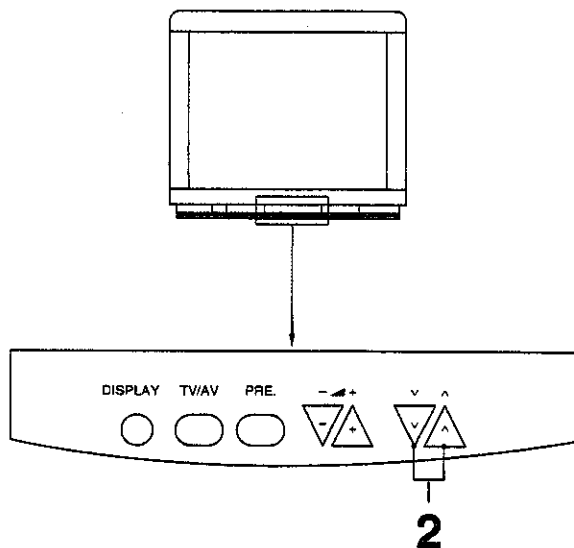

1




(TV set must be turned on.)
How to switch the power ON or OFF

Push this button to turn the TV set on.

Push it again to turn the TV set off.

2

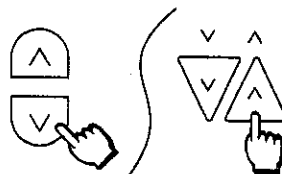

Programme Number Selection
Push the Programme Number Up " \wedge " or Down " \vee " Button to select the next higher or lower tuned channel.

3



Direct Programme Number Selection
(Programme Number 0-9)
e.g. To select Programme Number "7", push the "7" Button.

4




Two Digit Programme Number Selection


e.g. To select Programme Number "24".
Push the "2/4" Button.

Push the "2" Button.

Push the "4" Button.

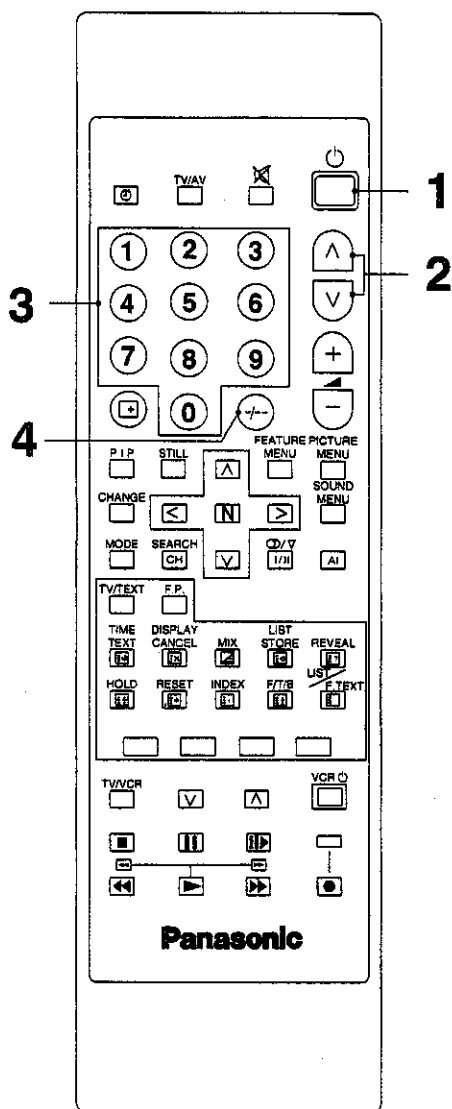


General Operation

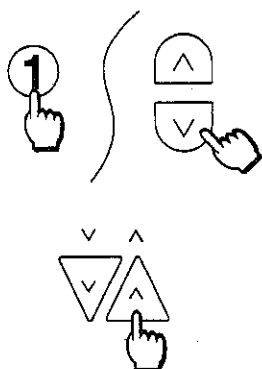

It is also possible to turn the TV set on by pushing the "Direct Programme Number Selection" Buttons (0-9) and the "Programme Number Up or Down" Button.


Note:

1. Do not leave the television in the Stand-by condition for extended periods of time.
It is also recommended that you turn the Television Off, for a short (approximately 1 hour) period, using the Main Power ON/OFF Switch periodically (e.g. weekly).
2. This allows, when the television is again turned on, the Automatic Demagnetization of the picture tube to be carried out.
If the television is not turned Off at the Power switch for an extended period, poor picture Colour Quality may become evident through residual magnetism within the picture tube.

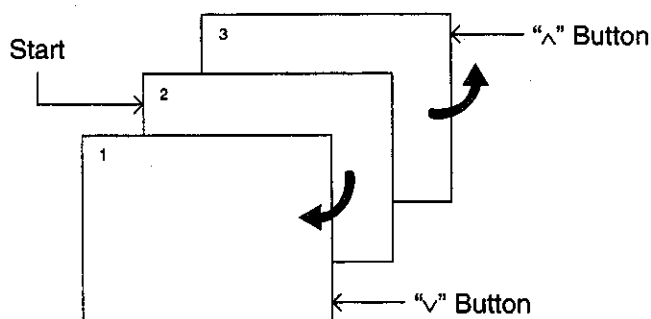


Note:


If the SKIP function has been set in either the next higher or lower Programme Number, then that skipped Programme Number will not be shown.

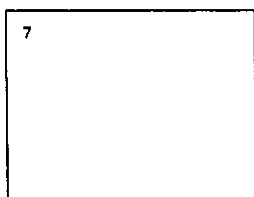

You can select the numbers 0 to 9 directly, by pushing the corresponding number.

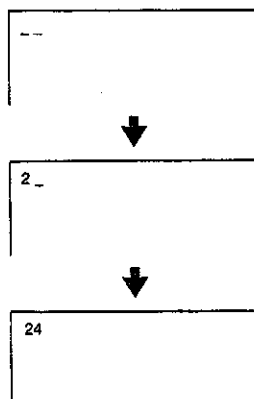


You can select a two Digit Programme Number.

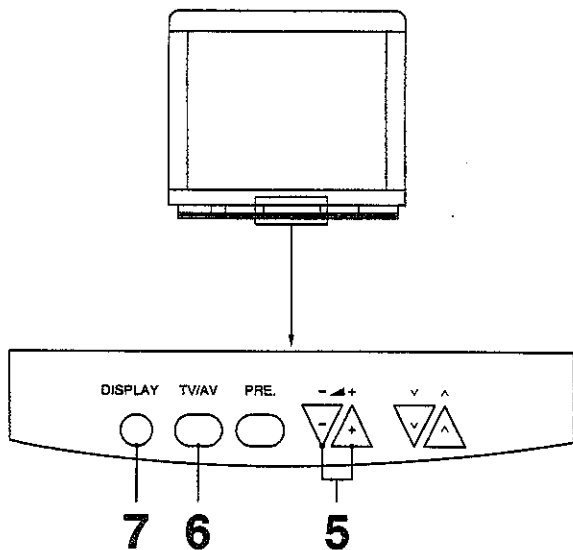


- 5**
- Volume Adjustment**
Push the Volume Up "▲" or Down "▼" Button to increase or decrease the sound volume level.

- 6**
- TV/AV Selection**
Push the "TV/AV" Button to select TV, AV1, AV2, AV3 input signal modes.

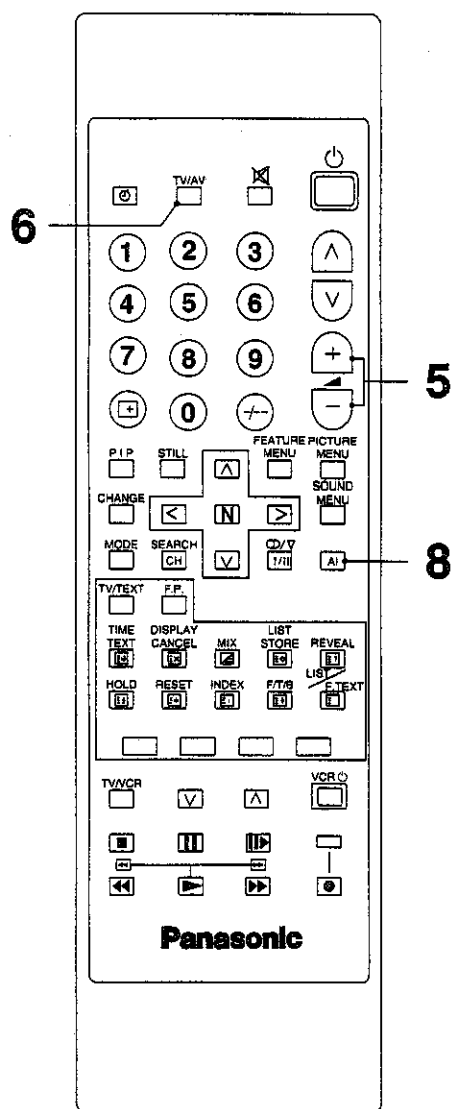


- 7**
- DISPLAY Button**
By pushing the display button various demonstrations and on-screen displays will appear.

- 8**
- AI Button**
As the TV video signal is processed for immediate reception, "Brightness", "Contrast", "Shade of colour", etc. are automatically adjusted to the optimum conditions. Each frame is finely and automatically adjusted to compensate for the pictures characteristics thereby achieving contrast with optimum field of depth, and vivid colour tones.

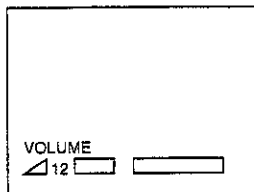

Note:


The on-screen display will indicate both numerically and graphically the volume level. Numeric levels start at "0" for zero on no sound, and will increase up to 63 which is the maximum sound level.

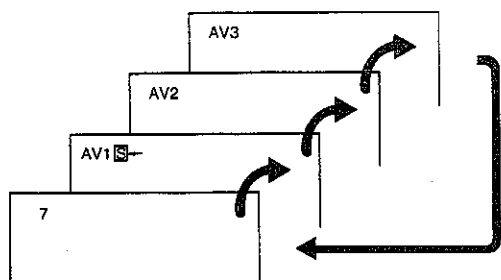

You can sequentially select TV and three AV modes (AV1, AV2 and AV3).


Note:

- (1) When the S-Video cable is connected to the "S-Video" Terminal, the "S-Video" symbol will be displayed on the screen as shown for AV1 at left.
e.g. In the diagram AV1 S-Video Terminal has an input connection.
- (2) When AV mode (AV1, AV2 and AV3) is selected and the selected AV mode has no AV signal, the Background colour of the TV screen will appear according to the receiving Colour System. (Refer to page 39 for details of Colour System.)
- (3) When TV mode is selected, the last Programme Number will appear on the screen.

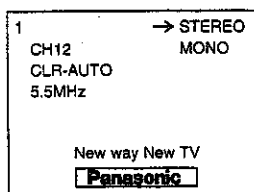


Note:

When this button is pushed, the Picture and Sound menu will change to Picture 2 (DYNAMIC) and Sound 2 (MUSIC). And each level will be changed to Normal mode. For Picture and Sound menu details, refer to Picture and Sound Operation on pages 42 through 45.

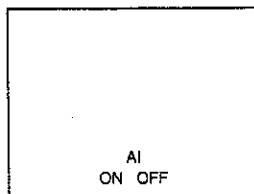

ON is highlighted → Activate

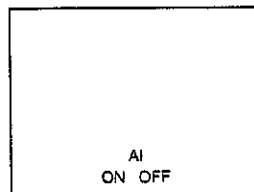

OFF is highlighted → Not Activate

9



Off Timer Button

The TV set may be preset to switch off after a fixed period.

To confirm the remaining time, push the "Recall" Button.

10



Mute Button

Push this button once to mute the sound by 50%.

Push this button again to mute the sound completely.


Push this button once again to restore the previous sound level, and cancel the mute.

11




Recall Button

Push the "Recall" Button.
Push again to cancel.

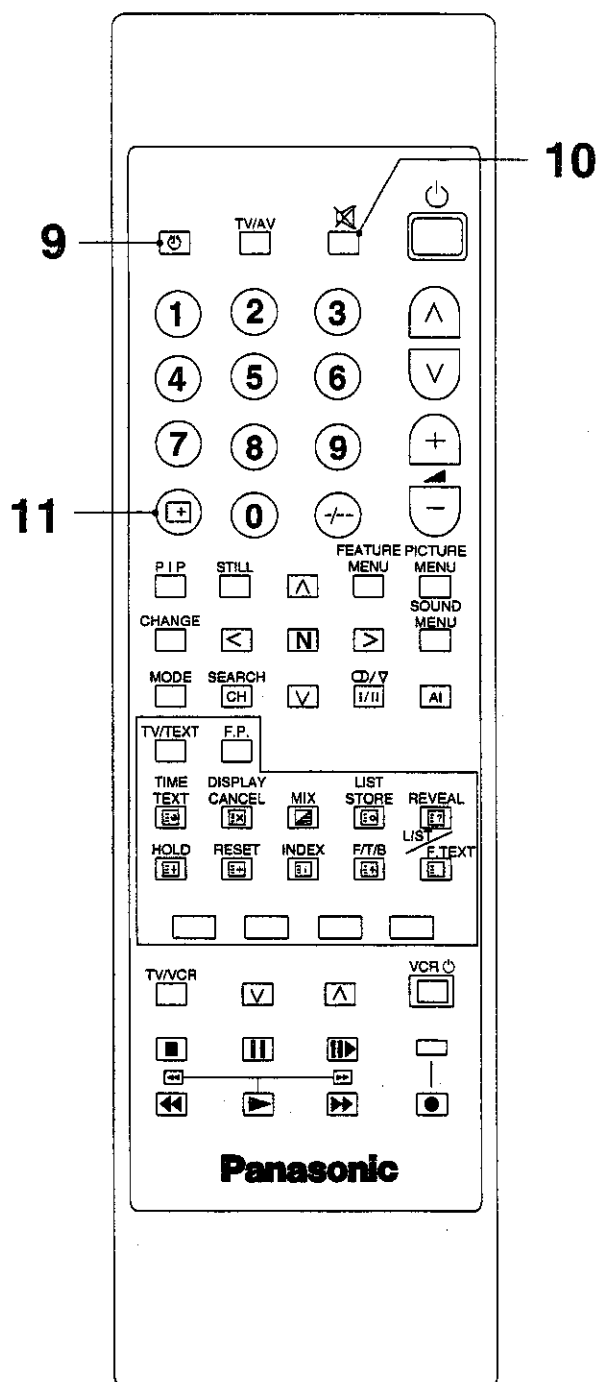



 
By pushing "OFF-Timer" Button, you can select the preset time either the "30", "60" or "90" minutes.




Note:

The Pre-set time may be cancelled by setting the Preset time condition to "0" using the "Off timer" Button, or by switching the set OFF.


Off Timer clock will flash prior to automatic turn off.

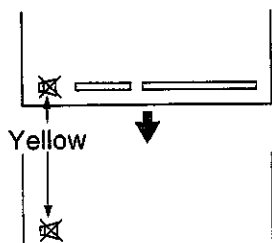

The on-screen display will appear Yellow for 2-3 seconds, followed by the Yellow mute symbol, which will remain while the mute function is active.

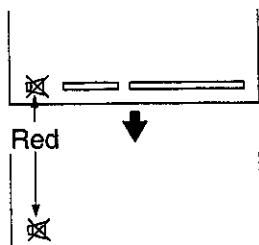


 The previous sound level will appear in Red. The "Mute" symbol will remain unchanged.




Note:

In the "Mute" condition, you can use the Volume "Down" Button, which won't cancel the mute function. Using the Volume "Up" Button, the "Mute" will be cancelled.

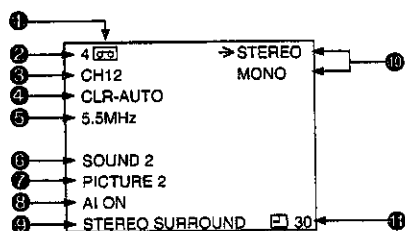


- ① VCR/GAME Indicator
- ② Programme Position Number
- ③ Programme Name
- ④ Colour System
- ⑤ Sound System
- ⑥ Sound Menu
- ⑦ Picture Menu
- ⑧ AI on or off
- ⑨ Surround Mode
- ⑩ Audio Mode
- ⑪ Off Timer

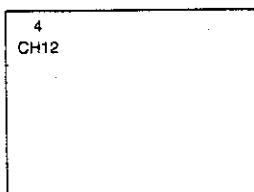

The Programme Number and Programme Name will remain.

Sound System Selection

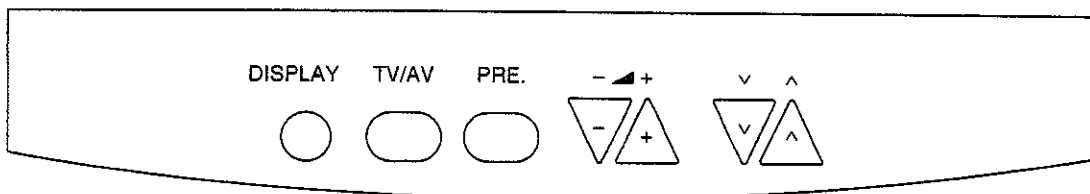

1

PRE.

(This function is used only in the TV mode.)
When the Sound is not clear or no sound is produced on a Programme Number Position, push the "PRE." (PRESET) Button 3 times.

4	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	4.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH__
	FINE TUNE	

Sound System Selection mode.

2

- +

Push the Volume Up "+" or Down "-" Button repeatedly until the optimum sound is obtained.

4	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	5.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH__
	FINE TUNE	

You may improve the sound condition.
The sound system will change as shown.

→ 4.5MHz ↔ 5.5MHz ←
→ 6.5MHz ↔ 6.0MHz ←

3

PRE.


Push the "PRE." (PRESET) Button 4 times.

4		
---	--	--

This returns the set to the normal viewing condition.

The selected sound system is automatically memorised.

Colour System Selection

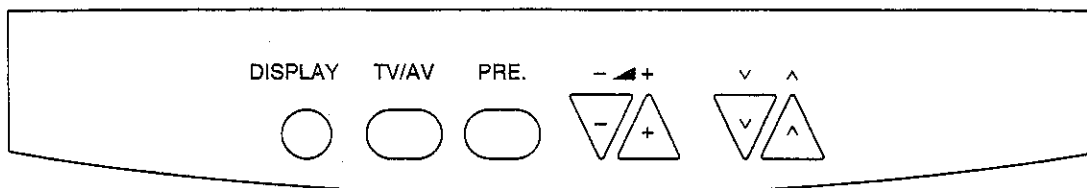

1



If a clear picture cannot be obtained even when a Broadcast or AV signal is received, push the "PRE." (PRESET) Button 4 times.

4	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	4.5MHz
	COLOUR SYS	CLR-AUTO
	CH WRITE	CH _ _
	FINE TUNE	

Colour System selection mode.

2



Push the Volume Up "+" or Down "-" Button repeatedly until the optimum image is produced.

4	PRESET	VHF-L
	AUTO TUNE	
	MANUAL TUNE	
	SOUND SYS	4.5MHz
	COLOUR SYS	PAL
	CH WRITE	CH _ _
	FINE TUNE	

You may improve the colour condition.


The colour system will change as shown.

CLR-AUTO ↔ PAL
↕
SECAM
↕
NTSC3.58 ↔ NTSC4.43

3



Push the "PRE." (PRESET) Button 3 times.

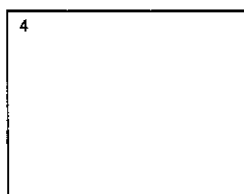


This returns the set to the normal viewing condition.

The selected colour system is automatically memorised.

Helpful Hint

When the signals are weak or cannot be received under the "Picture Noise Reduction" OFF condition, (Refer to pages 46 and 47), a colour on the background TV screen will appear according to the Colour System. Set by the above procedure.

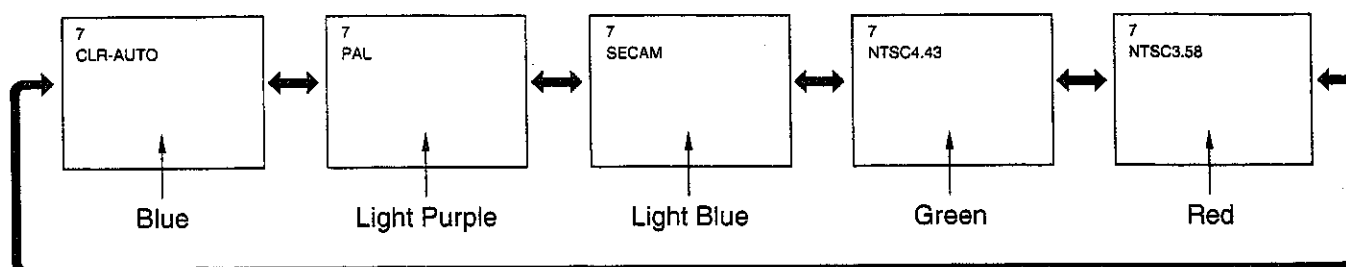

Practice Exercise: Sample Question



Sound output mode can be selected by pushing the "Stereo/Bilingual Sound Selection" Button.








The Stereo broadcast system is different for different countries. When a stereo, dual-sound track or monaural programme is being received, the on-screen display indicates to inform you of the type of broadcast.



*: Function available

When the broadcasting mode changes to "STEREO", "DUAL", or "1 MONO" after the user have selected "MONO" mode, change over to either "STEREO" or "MAIN" Modes will be made automatically.

Advanced Example: German/Spanish

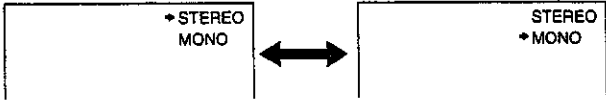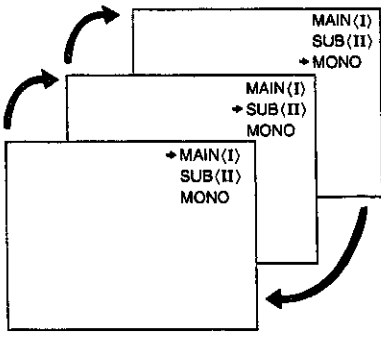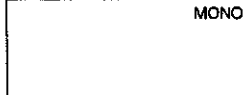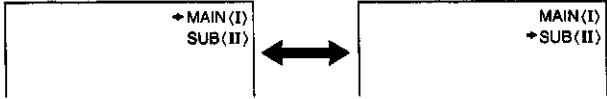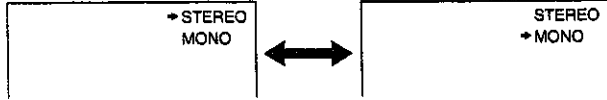Type of Stereo	Type of broadcast	On-screen indication	Remark
NICAM Digital Stereo	Regular broadcast (Standard Audio)		Normal use
	Regular + NICAM MONO I (MAIN<I>)		You can select either the "MAIN<I>" or "MONO" audio signal.
	NICAM STEREO		You can select either the "STEREO" or "MONO" mode.
	NICAM DUAL MONO (MAIN<I>/SUB<II>)		You can select either the "MAIN<I>," "SUB<II>" or "MONO".
A2 (German) Stereo	Regular broadcast (Standard Audio)		Normal use
	Bilingual or DUAL MONO: MAIN<I>/SUB<II>		You can select either the "MAIN<I>" or "SUB<II>" audio signal.
	STEREO		You can select either the "STEREO" or "MONO" mode.

Note:

- (1) When the power is switched ON, the mode is preset at either "MAIN <I>" or "STEREO".
- (2) Even when the contents of the receiving signal undergo changes, selection mode is kept intact.
- (3) When the receiving conditions deteriorate, listening will be easier if the mode is set to the "MONO" position, using the Stereo/Bilingual Sound selection button as shown on the opposite page.

Picture and Sound Menu Selection


1

PICTURE
MENU



Picture Menu Select Operation
By pushing the "PICTURE MENU" Button, you can sequentially select any one of the three Picture Menus (STANDARD, DYNAMIC or MILD).

You can change the each level of each picture menu.
Please refer to pages 44 and 45.

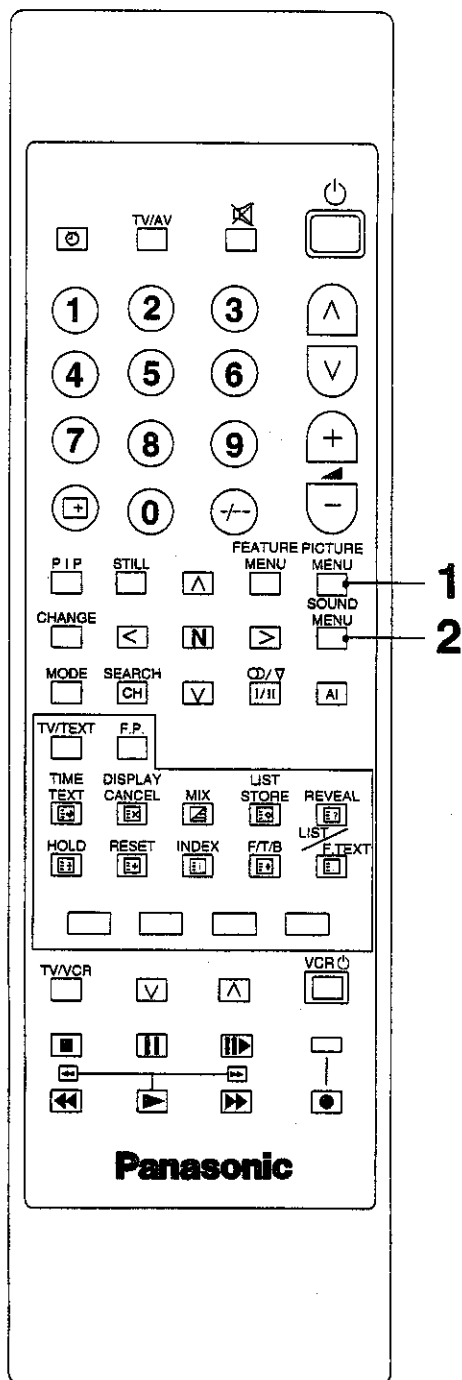


2

SOUND
MENU



Sound Menu Select Operation
By pushing the "SOUND MENU" Button, you can sequentially select one of three Sound Menus (STANDARD, MUSIC or SPEECH).

You can change the each level of each sound menu.
Please refer to pages 44 and 45.

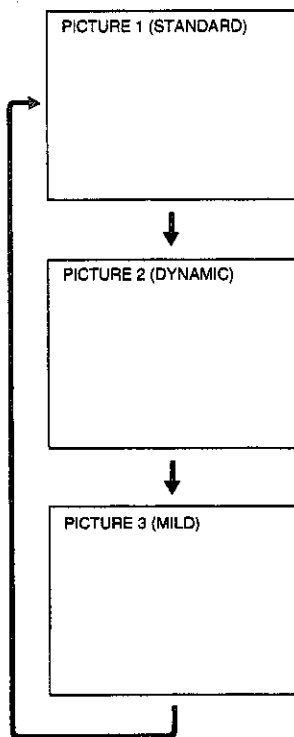

PICTURE 1 (STANDARD)


For watching in normal (evening lighting) environments. This menu selects the normal level of Brightness and Contrast.

PICTURE 2 (DYNAMIC)

For watching in brighter environments. This menu selects a higher than normal level of Brightness and Contrast.

PICTURE 3 (MILD)

For watching in a dark room. This menu selects reduced levels of Brightness and Contrast.

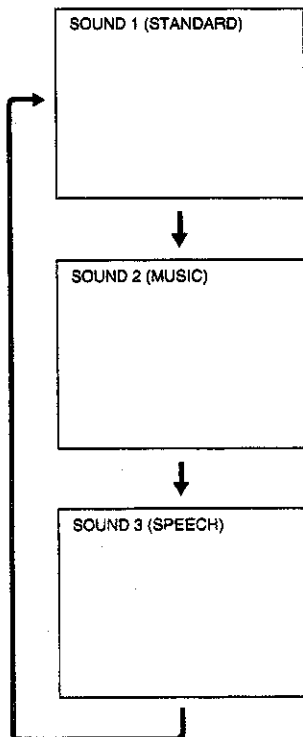

SOUND 1 (STANDARD)

For Normal use.


SOUND 2 (MUSIC)

For MUSIC programmes for example.

SOUND 3 (SPEECH)

For News programmes for example.

Feature Menu Operation (Picture and Sound)

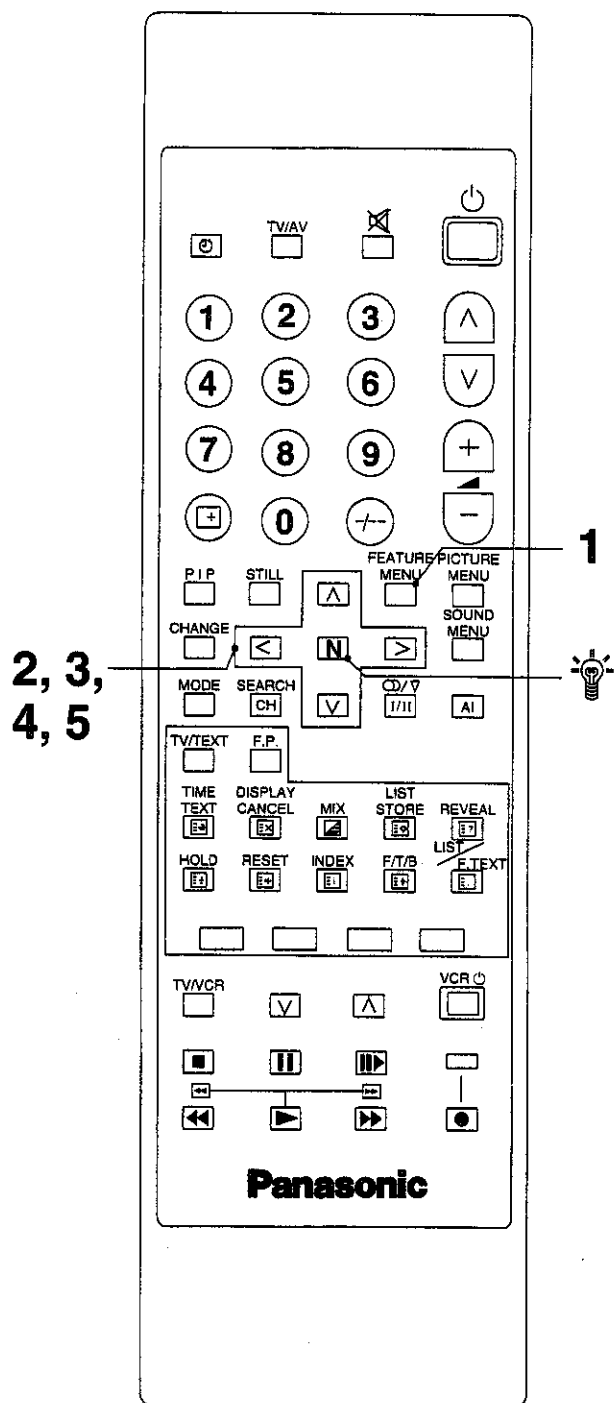

1


FEATURE
MENU



Push the "FEATURE MENU" Button.


Push again to cancel.

2

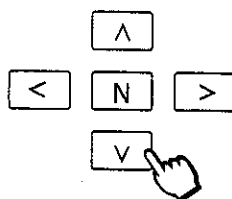


Select the feature you wish to change (Picture or Sound) by using the cursor Up "^" or Down "v" Button.

3

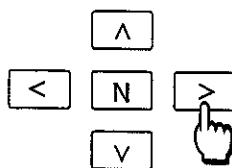


Push the cursor Left "<" or Right ">" Button.
The Yellow background colour will change between left and right positions.
NO is highlighted → Not Active
YES is highlighted → NEXT Menu

4

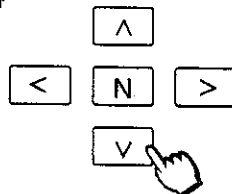

Select the function you wish to change by pushing the cursor Up "^" or Down "v" Button.

5

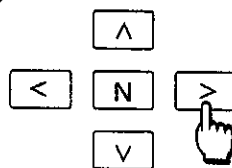

By pushing the cursor Left "<" or Right ">" Button, you can select the desired level of the function you have selected.



Helpful Hint



By pushing the Normal "N" Button while the Picture or Sound menu is displayed, the selected menu will be changed to the Normal Mode.

Normalization will not occur if the menu is not displayed when the "N" Button is pressed.

ADVANCED MENU SCREENS / NORMALISATION


MENU		
PICTURE	NO	YES
SOUND	NO	YES
VCR/GAME	ON	OFF
NOISE TIMER	ON	OFF
P-NR	ON	OFF
SURROUND	NO	YES

The "MENU" screen will appear.

You can change/select the condition of each item on the menu.

MENU		
PICTURE	NO	YES
SOUND	NO	YES
VCR/GAME	ON	OFF
NOISE TIMER	ON	OFF
P-NR	ON	OFF
SURROUND	NO	YES

 The background colour of the selected feature will change to blue. You can select the desired Feature Menu. Feature Menu will change as follows.



(Picture Menu)

MENU		
PICTURE	NO	YES
SOUND	NO	YES
VCR/GAME	ON	OFF
NOISE TIMER	ON	OFF
P-NR	ON	OFF
SURROUND	NO	YES

(Sound Menu)

MENU		
PICTURE	NO	YES
SOUND	NO	YES
VCR/GAME	ON	OFF
NOISE TIMER	ON	OFF
P-NR	ON	OFF
SURROUND	NO	YES

The yellow background colour will change to the selected function position.

Note:

Even if the TV is not set to "NTSC" mode, "NTSC-TINT" will be displayed and level adjustment would be possible. But it would not function.

PICTURE 1 (STANDARD)	
32	COLOUR
32	NTSC-TINT
32	BRIGHT
47	CONTRAST
32	SHARPNESS

SOUND 2 (MUSIC)	
48	BASS
42	TREBLE

COLOUR	
32	

BASS	
48	

PICTURE 1 (STANDARD)	
32	COLOUR
32	NTSC-TINT
32	BRIGHT
47	CONTRAST
32	SHARPNESS
NORMAL	


SOUND 2 (MUSIC)	
48	BASS
42	TREBLE
NORMAL	

The Normal mode is the factory preset condition. Returning to this original condition is called "Normalisation".

Note:

The on-screen display for BALANCE is:
level: 32 (center position)
level bar: Red.

Feature Menu Operation (VCR/GAME, NOISE TIMER and P. NR)

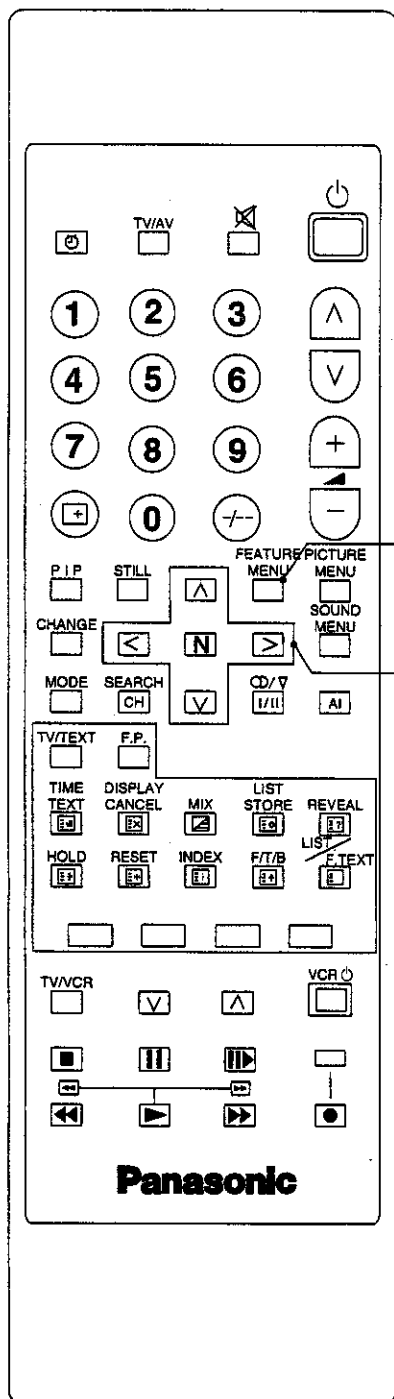

1


FEATURE
MENU

Push the "FEATURE MENU" Button.




Push again to cancel.

2

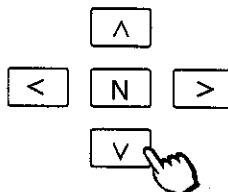

Select the feature you wish to change (VCR/GAME, NOISE TIMER, P. NR) by using the cursor Up "^" or Down "v" Button.

3

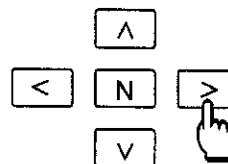

Push the cursor Left "<" or Right ">" Button.

The yellow background colour will change between left and right positions.

OFF is highlighted → Not Active
ON is highlighted → Active

VCR/GAME Mode

Reproduction of irregular signals; such as certain TV games and rental video tapes, may be improved.

NOISE TIMER Mode

If the set is not switched off when the TV station stops broadcasting, it will automatically go to stand-by condition after 5 minutes.

Note:

This function will not operate when the Television receiver is in AV mode.

P. NR Mode

The Picture Noise Reduction System is designed to reduce Picture Noise during poor quality reception conditions.

Note:

When you want to watch a weak broadcast signal in spite of the disturbance, turn the Picture Noise Reduction ON.

The TV set will then be able to receive the weak signal without the background colour, which would otherwise appear if the TV signal is excessively weak.

Advanced Remote Control Operation


MENU		
PICTURE	NO	YES
SOUND	NO	YES
VCR/GAME	ON	OFF
NOISE TIMER	ON	OFF
P-NR	ON	OFF
SURROUND	NO	YES

The "MENU" screen will appear.
You can change/select the each condition of each item on the menu.

MENU		
PICTURE	NO	YES
SOUND	NO	YES
VCR/GAME	ON	OFF
NOISE TIMER	ON	OFF
P-NR	ON	OFF
SURROUND	NO	YES

The background colour of the selected feature will change to blue.

MENU		
PICTURE	NO	YES
SOUND	NO	YES
VCR/GAME	ON	OFF
NOISE TIMER	ON	OFF
P-NR	ON	OFF
SURROUND	NO	YES

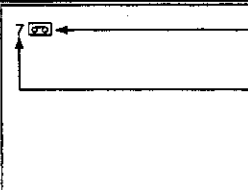

VCR/GAME
Indicator
Programme
Position Number

This function is only effective when the RF IN Terminal is used.

MENU		
PICTURE	NO	YES
SOUND	NO	YES
VCR/GAME	ON	OFF
NOISE TIMER	ON	OFF
P-NR	ON	OFF
SURROUND	NO	YES


MENU		
PICTURE	NO	YES
SOUND	NO	YES
VCR/GAME	ON	OFF
NOISE TIMER	ON	OFF
P-NR	ON	OFF
SURROUND	NO	YES

When the Picture Noise Reduction System is ON, picture noise will be softened and less sharp.

MENU		
PICTURE	NO	YES
SOUND	NO	YES
VCR/GAME	ON	OFF
NOISE TIMER	ON	OFF
P-NR	ON	OFF
SURROUND	NO	YES

When the Picture Noise Reduction System is OFF, the picture will be sharper.
On the channel of a weak broadcast signal or no signal, the background colour on the TV screen will appear according to the receiving Colour System, refer to page 39.

Feature Menu Operation (Surround)

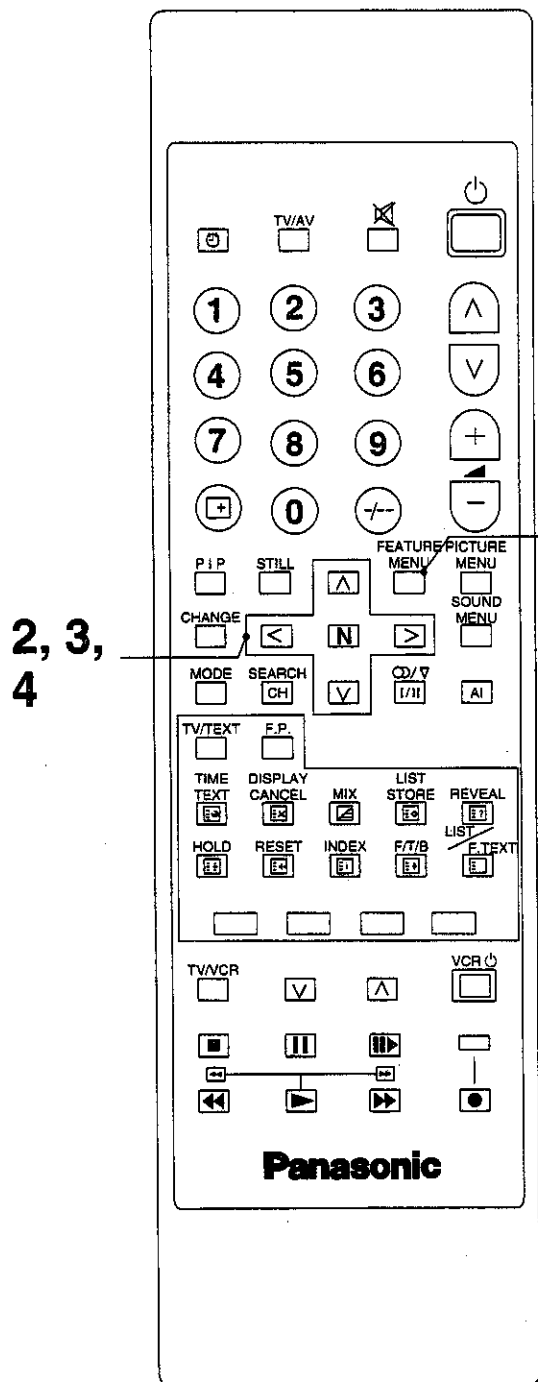


1

FEATURE
MENU




Push the "FEATURE MENU"
Button.

2

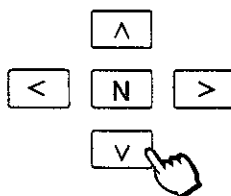

Select the Surround Feature by
using the cursor Up "^" or Down
"V" Button.


3

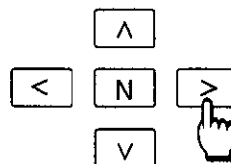

Push the cursor Left "<" or Right
">" Button.

NO is highlighted → Not Active
YES is highlighted → NEXT Menu

4

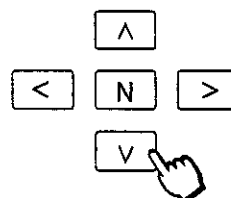

Select your desired function by
pushing the cursor Up "^" or
Down "V" Button.

Advanced Remote Control Setup


MENU		
PICTURE	NO	YES
SOUND	NO	YES
VCR/GAME	ON	OFF
NOISE TIMER	ON	OFF
P-NR	ON	OFF
SURROUND	NO	YES

The "FEATURE MENU" screen will appear.
You can change/select the each condition of each item on the menu.


MENU		
PICTURE	NO	YES
SOUND	NO	YES
VCR/GAME	ON	OFF
NOISE TIMER	ON	OFF
P-NR	ON	OFF
SURROUND	NO	YES

The background colour of the selected feature will change to blue.

MENU		
PICTURE	NO	YES
SOUND	NO	YES
VCR/GAME	ON	OFF
NOISE TIMER	ON	OFF
P-NR	ON	OFF
SURROUND	NO	YES



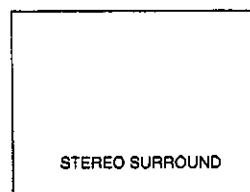


You can change the Surround effect. The indicator will change as follows.

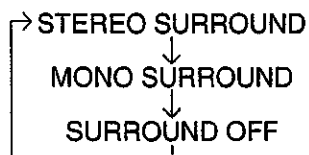


Advanced Remote Control Operation

On-screen display during surround mode.

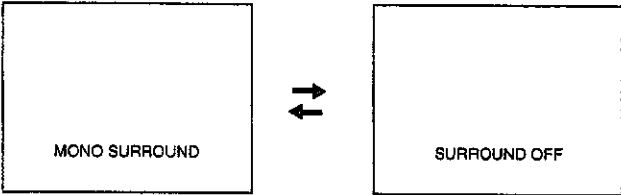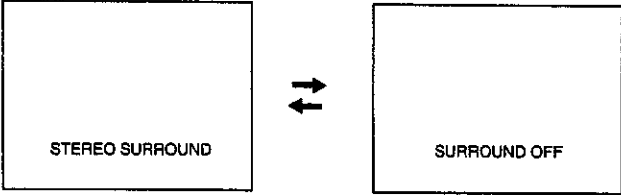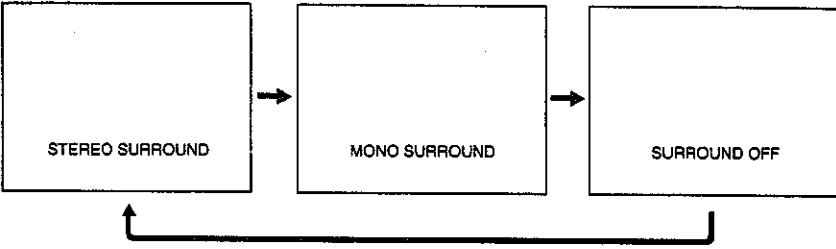	Type of broadcast	On-screen display	Remark
TV Mode	<ul style="list-style-type: none"> • MONO (Including STEREO switched to MONO by you) and BILINGUAL 		You can select either "MONO SURROUND" or "SURROUND OFF".
	<ul style="list-style-type: none"> • STEREO 		You can select either "STEREO" or "SURROUND OFF".
AV Mode	<ul style="list-style-type: none"> • Select the AV Mode (AV1, AV2 and AV3) 		You can select either of the three surround modes "STEREO/MONO/OFF".

Picture in Picture Operation

With this advanced digital feature, you can use your VCR to enjoy a movie while still keeping up with the latest news. You actually see two sources at the same time: one on the main screen, the other inset on a subscreen. Main and subscreen images may be interchanged instantly, and the subscreen image can be shifted to any position of the main screen by remote control.

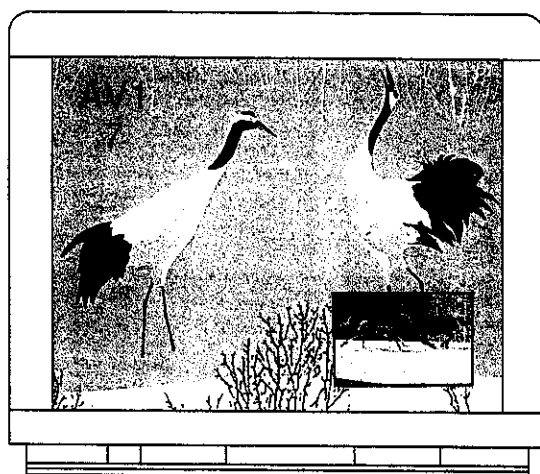


Helpful Hint

The size of the sub picture varies according to the colour system of the input signals due to the difference of field frequency (50 Hz or 60 Hz) as shown below.

Main Picture	Sub Picture	Size of Sub Picture
Same field frequency PAL ————— PAL NTSC 3.58 ————— NTSC 4.43 SECAM ————— PAL		STANDARD
NTSC 3.58, NTSC 4.43 PAL 60 Hz or SECAM 60 Hz (All 60 Hz field freq.)	PAL, SECAM or NTSC 50 Hz (All 50 Hz field freq.)	Slightly bigger than STANDARD
PAL, SECAM or NTSC 50 Hz (All 50 Hz field freq.)	NTSC 3.58, NTSC 4.43 PAL 60 Hz or SECAM 60 Hz (All 60 Hz field freq.)	Slightly smaller than STANDARD

Picture in Picture Operation

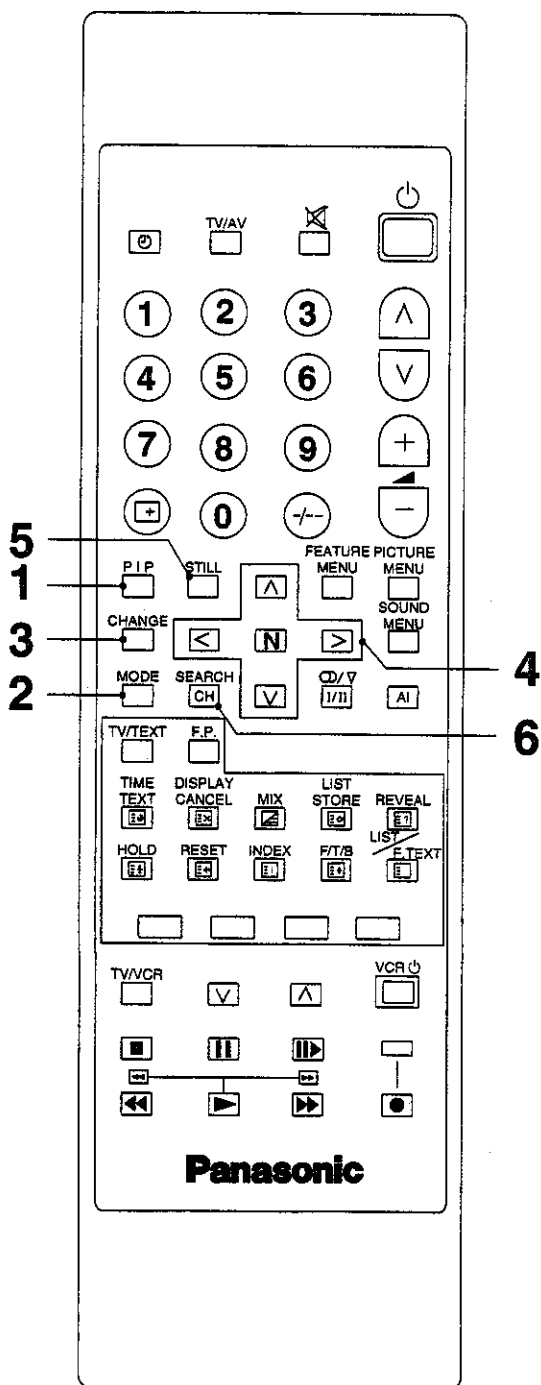

1

PIP

Picture in Picture Button
Push the "PIP" Button to superimpose a small picture in the main picture.

2

MODE

MODE Button
To change the mode of the sub picture, push the "MODE" Button.

3

CHANGE

CHANGE Button
Push the "CHANGE" Button to exchange from Main picture to Sub picture and vice versa.

4

Position Buttons
By pushing each "Position" Button, you can easily select the desired position of the sub picture on the screen.

Note:
By pushing the Normal "N" Button while the picture in picture mode is activated, the sub picture position will be changed to the bottom of the Right corner.

5

STILL

STILL Button
The Still function can be used to freeze the action on the screen and display a still picture.


Push the "STILL" Button to freeze the moving picture into a still picture.
Push again to cancel.

6


SEARCH CH

CH (Channel) SEARCH Button
This function can only be used when the Main Picture is in AV mode, and the Sub Picture is in TV mode.
By pushing this button, it is possible to search through all programmed positions and display a picture on the sub picture screen.





AV2 mode: Picture-in-Picture Operation

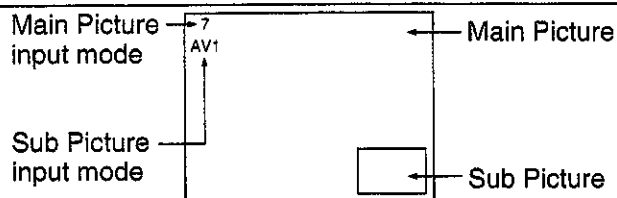

 To cancel the Picture-in-Picture function:
Push the "PIP" Button.



At every push of the "MODE" Button, the mode of the sub picture changes as shown at left.

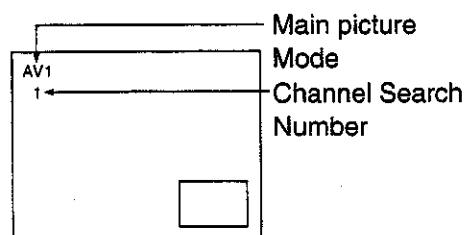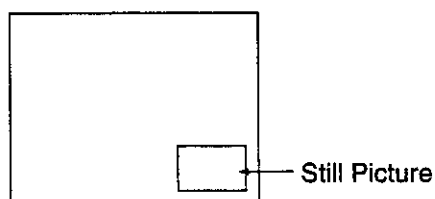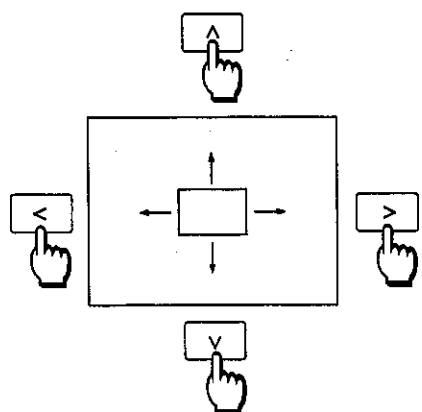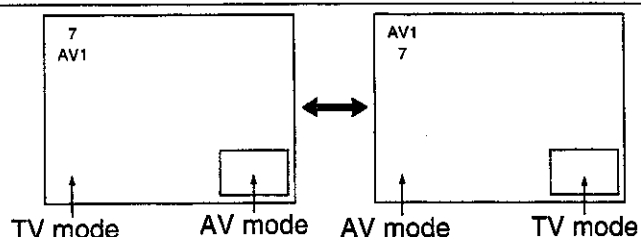


How to watch the TV programme


1. You can choose the desired TV programme by again pushing the "P I P" or "CH SEARCH" Button during the "Channel Search" operation. Then the selected Programme will be displayed on the sub picture screen.
2. Push the "CHANGE" Button to exchange from Main picture to Sub picture.

Teletext Operation

Basic Operation

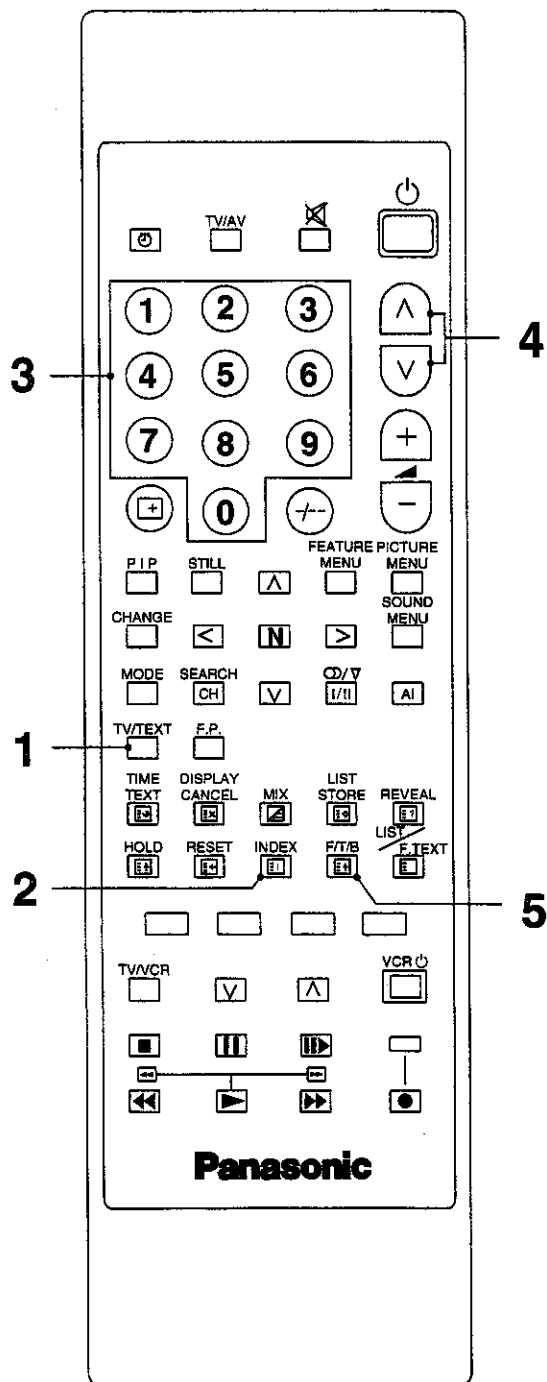


A black bar briefly appears to indicate Teletext availability, when a channel with Teletext is selected. If the station broadcasting Teletext has its own title transmitted in the Teletext signal for inclusion in this position, then this title will appear inside the black bar.

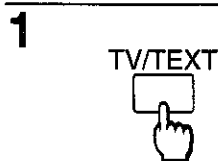


TV/TEXT Selection Button
Push this button to select the "TEXT" mode.

To return to the TV mode, push this button again.

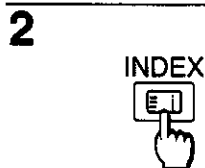


INDEX Button
Push this button, in "F. TEXT" Mode, to return to the index page.

Depending on the way information is transmitted by each TV channel, this "INDEX" Button may need to be pushed more than once to return to the main index page.

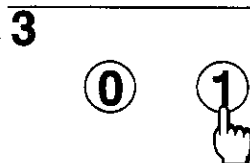


Numerical Buttons
To select the required page of TELETEXT, use these buttons "0" to "9".

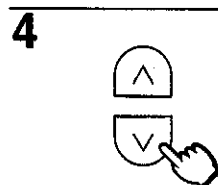


Page Number Up/Down Buttons
Push the Page Number Up "▲" Button to step up to the next higher TELETEXT page.

Push the Page Number Down "▼" Button to step down to the next lower TELETEXT page.

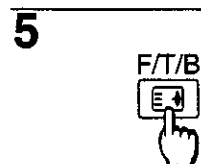

Full/Top/Bottom Button
This function is used when characters on the TV screen are hard to read. Pushing the 1st time expands the upper half of the screen only. Pushing the 2nd time expands the lower half of the screen only. Pushing the 3rd time returns the display to its original size.


For example:

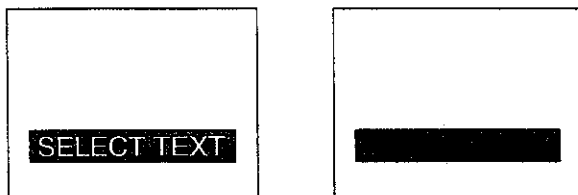

Note:


When TELETEXT is selected after the TV is switched ON, the first page displayed is that stored in the red position in LIST mode.

Refer to pages 60 and 61.

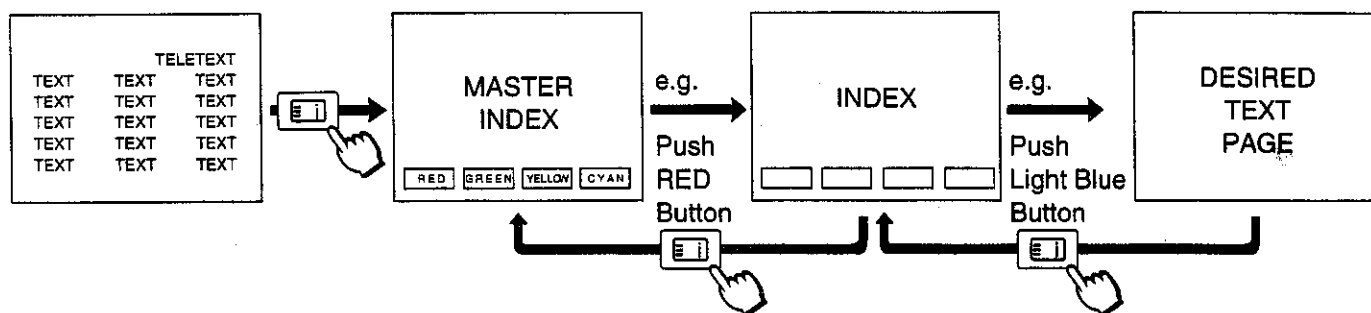

Note:


All Page Numbers consist of 3 digits, the lowest being 100 and the highest being 899, and the first being between 1 and 8 inclusive.

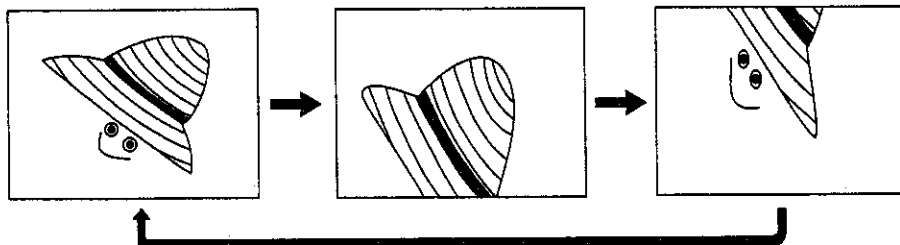

Note:

When the next page is selected under expanded conditions, the upper half of the next page is expanded for display.

Text Sub Page Access

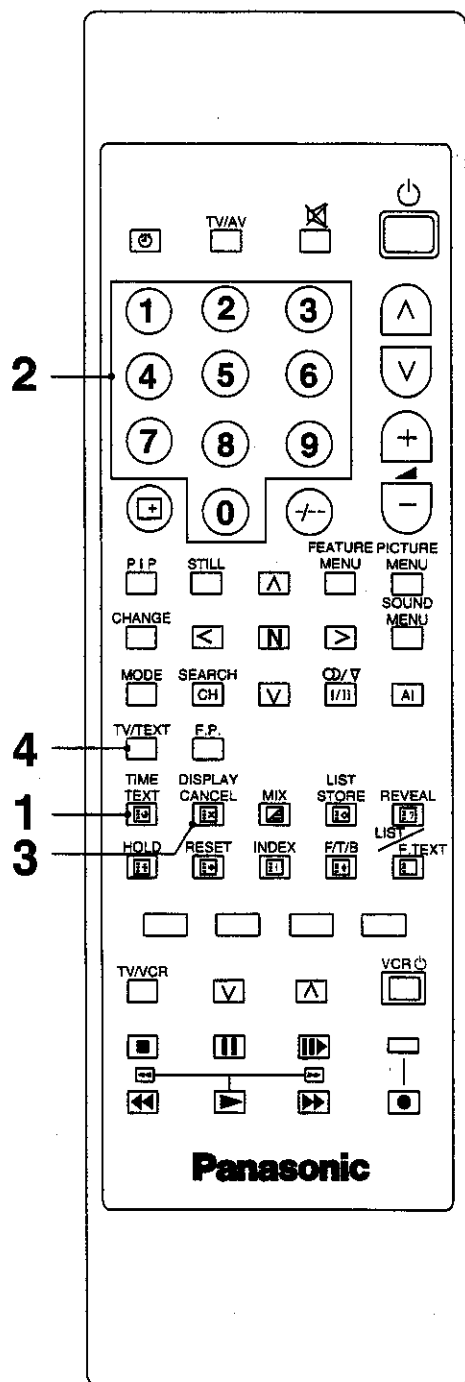

When a Teletext Information Page exceeds more than one screen of information, it may take some time for the automatic changing of the sub-pages to reach the sub-page you require.

It is possible to enter your required sub-page and continue watching the normal programme until the correct sub-page is found.


1



(Teletext must be selected first.)
The Required Teletext page must be selected.
(The Page in which sub-pages exist.)

Push the "TIME TEXT" Button.

2

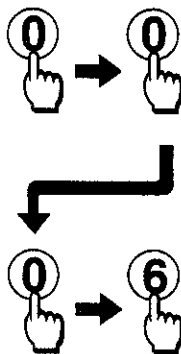

Enter the desired sub-page number while the "T****" prompt is on screen.

Note:
Sub-page selection must be inserted as a 4 Digit Number.

i.e. for sub-page 6 the numbers "0-0-0-6" must be entered.

3





Push the "DISPLAY CANCEL" Button to view the normal TV programme.

4





Push the "TV/TEXT Selection" Button to display the received sub-page.
To clear the sub-coded page, enter a new page number or push the "RESET" Button.

Note:
It is not possible to select another Programme Number during sub-page operation, without cancelling the sub-page search operation.

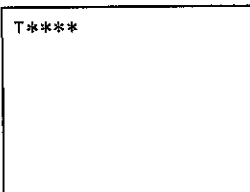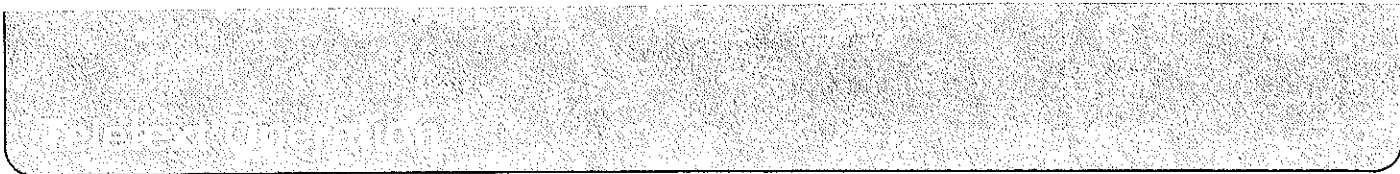

At that time, "T****" will be displayed at the top left of the screen.

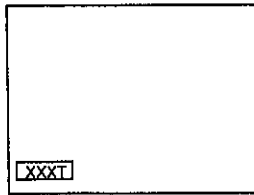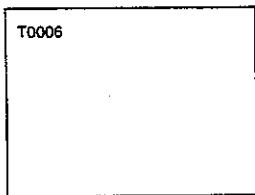


In "LIST" mode the letter "T" will appear in the current coloured box at the bottom left of the screen.
This is an indication that the sub-code has been set.

Note:


If no sub page exists for the Page for which this function has been set, the system will wait indefinitely, until it has been cancelled.

 TEXT message



When the desired sub-page is received, the "TEXT" message appears at the top left of the screen.

Text ALARM Page Access

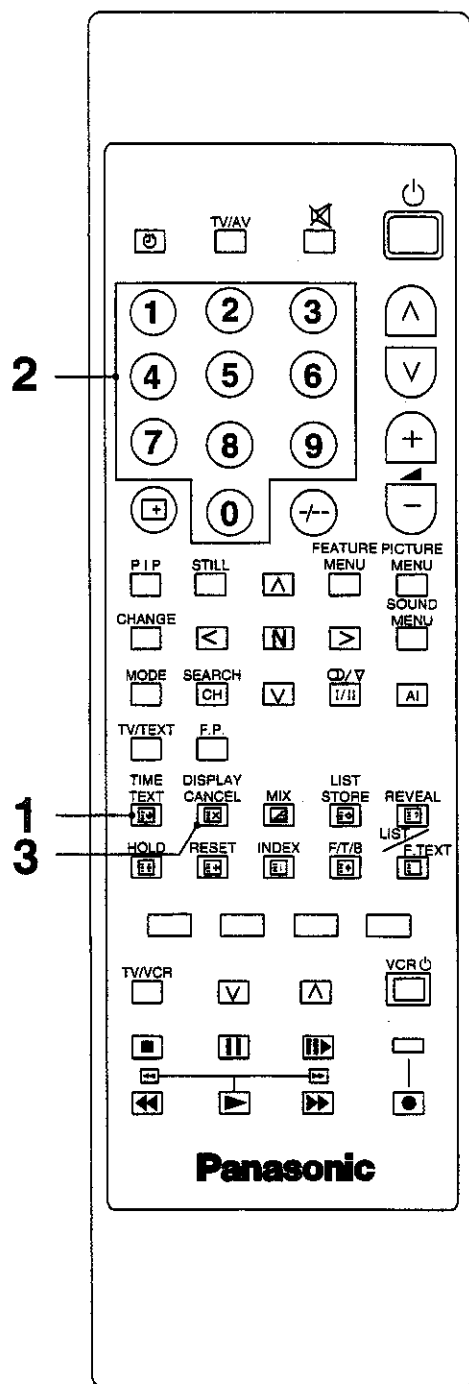


This function is used for selected pages only.
e.g. The Teletext ALARM page.
Refer to the subject index page for page location.

1



(Teletext must be selected first.)
The Text ALARM Page must be selected.
Push the "TIME TEXT" Button.

2

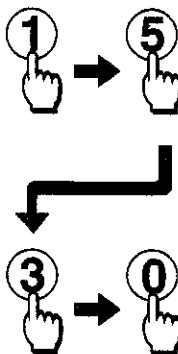

This feature uses a 24 hour clock,
e.g. 3:30 pm = 1530.

To set the time at which the
ALARM page is to be displayed,
e.g. 1530, push buttons 1, 5, 3, 0
consecutively.
The "T****" display will change
to "T1530" momentarily then
return to the current page number.

3



Push the "DISPLAY CANCEL"
Button to view the TV broadcast.



Helpful Hint

To cancel this feature

Push the "TV/TEXT Selection" Button to return to normal viewing.

If you wish to select other teletext pages, push the "RESET" Button.

Note:

This function is not currently transmitted in some countries.

Time and Alarm Setup

T****
ALARM PAGE
ALARM PAGE
ALARM PAGE
ALARM PAGE

At that time, "T****" will be displayed at the top left of the screen; now enter the time at which this alarm page should be displayed using buttons 0 to 9 on the remote control.

T1530




L XXXT 200 300 400

In "LIST" mode the letter "T" will appear in the current coloured box at the bottom of the screen indicating that the alarm page has been set.

ALARM PAGE
ALARM PAGE
ALARM PAGE
ALARM PAGE
ALARM PAGE

At 15:30 the alarm page will be displayed.

List Mode Access

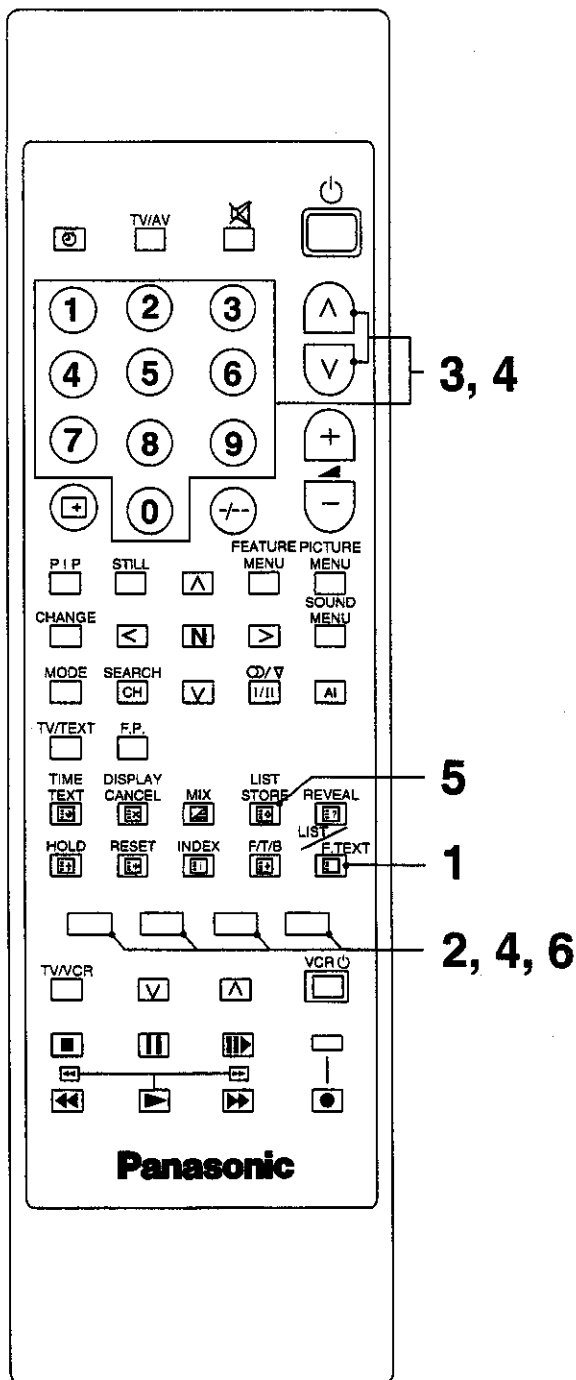

LIST mode is a convenient way of accessing some teletext pages without the need to enter page numbers.

In this mode, 4 page numbers can be preset for each Programme Number 1 to 10 (1 to 25 only for TX-29/33V30XE). A maximum of 40 (100 only for TX-29/33V30XE) pages can be programmed. (i.e. 4 pages × 10 (1 to 25 only for TX-29/33V30XE) Programme Numbers) Any one of these 4 pages can be displayed instantly by pushing the corresponding "colour coded" Button on the Remote Control.

List Mode Page Memory Allocation

1




(Teletext must be selected first.)

Select the "LIST" Mode by pushing the "LIST/F. TEXT" Button.


Pushing this Button will switch between the "LIST and F. TEXT" mode.

2

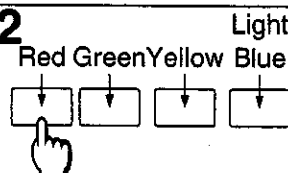

To select a memory position, push one of the "colour-coded" Buttons.

3

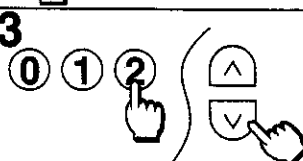

Enter the page number of the desired Teletext page by using buttons "0" to "9".

4




Repeat steps 2 and 3 for the remaining positions if required.

5




Push and hold the "LIST STORE" Button until the background of the 4 numbers changes from Black to White.

6

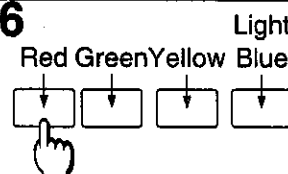


Any one of these 4 pages can then be displayed instantly by pushing the corresponding "colour coded" Button on the Remote Control.

List mode

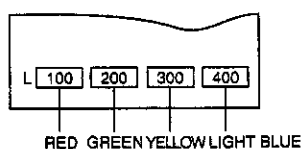

F. TEXT mode

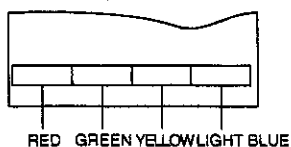

Note:

F. TEXT Mode is currently not transmitted within Australia.

You can also use the "Programme Up or Down" Buttons to enter the page number.

Up to 4 page numbers can be preset for each Programme Number 1 to 10 (1 to 25 only for TX-29/33V30XE).


This stores these page numbers into memory.

Every time a "List" Mode is selected, these 4 page numbers will flash until all 4 pages have been received and stored in memory.

Note:

- (1) If a new page number is entered for viewing, it will not replace the previous number in the memory at that position unless the "LIST STORE" Button is pushed and held down for a few seconds.
The 4 page numbers will be reset to the preset numbers when either the "Reset" Button is pushed or the Programme Number is changed, or the mode is changed to F. TEXT and then returned to LIST mode again, or the TV set is turned off.
- (2) The 4 preset page numbers can be changed when required by following procedures 2 to 5 above.
- (3) Page number presetting can only be performed on Programme Numbers 1 to 10 (1 to 25 only for TX-29/33V30XE).

Fast Text (F. TEXT) Mode Access

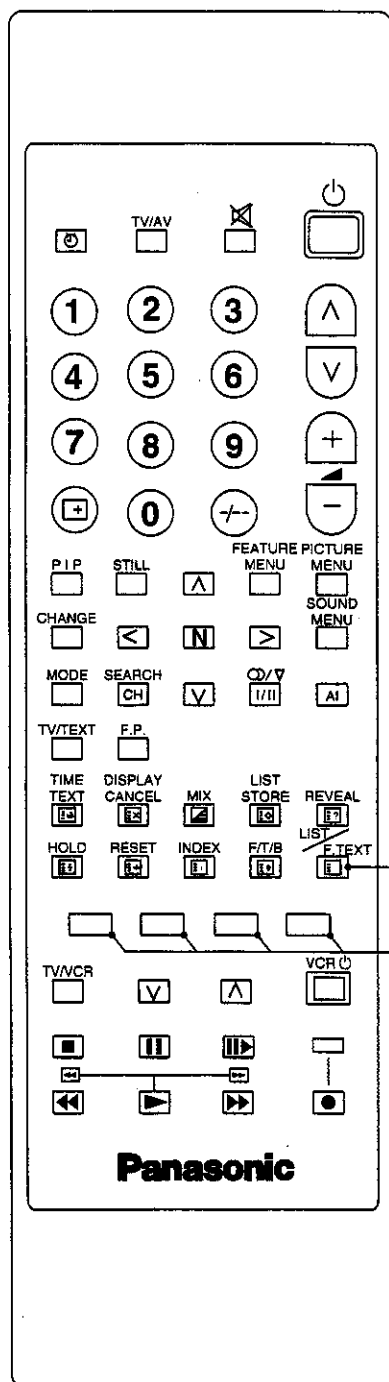


In "F. TEXT" mode, select the desired teletext information by pushing one of the "colour-coded" Buttons on the remote control which corresponds with the coloured subject title on the screen.

1


LIST
F. TEXT



(Teletext must be selected first.)
Push the "LIST/F. TEXT" Button to select "F. TEXT".

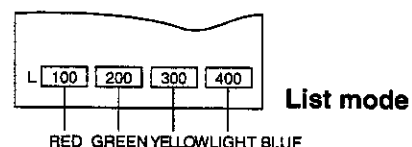


List mode

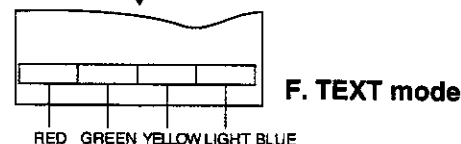

F. TEXT mode

e.g. The on-screen display with these subject titles.

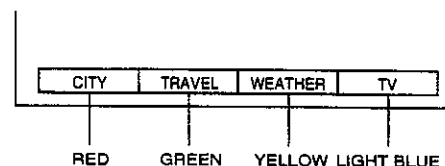

2



e.g. Viewing the "Weather" page.
Push the "Yellow" Button on the remote control.


3

Follow the same procedure to access other colour coded information pages.

Note:

1. Subject's titles and their sequence for access are set-up by TV broadcast stations; they are not user definable with the Remote Control.
2. It is a convenient way of accessing some Teletext pages without the need to enter page numbers.
3. This function is not currently transmitted in some countries.

Display Cancel Operation

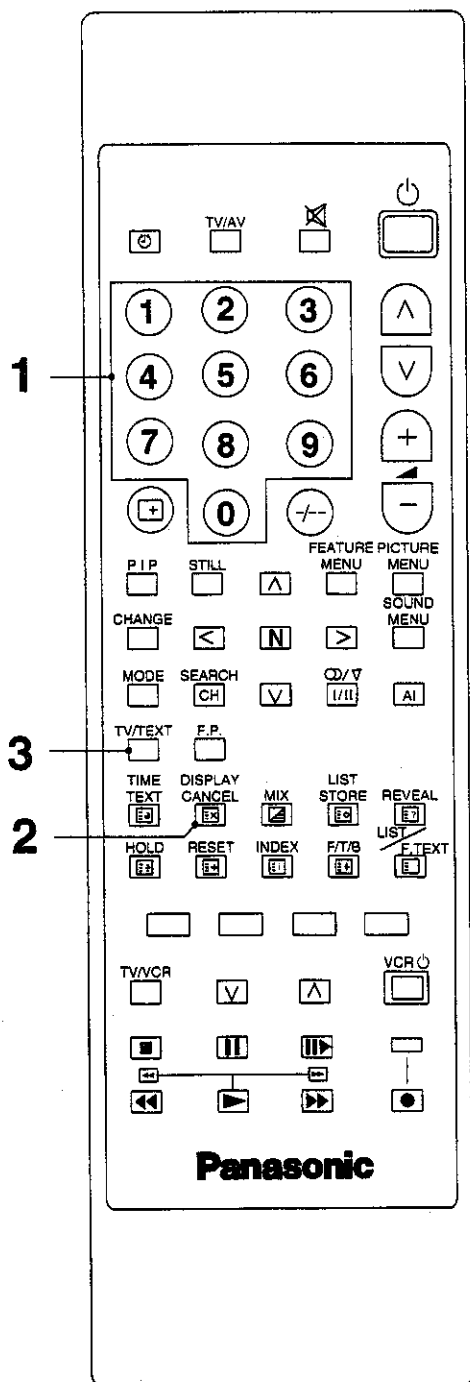


(Teletext must be selected first.)

While a selected page is being searched for, the normal TV picture can be viewed by pushing this button.

When the page is found, the "TEXT" message will be displayed at the top left corner of the screen.

Pushing the "TV/TEXT Selection" Button will display the selected page.

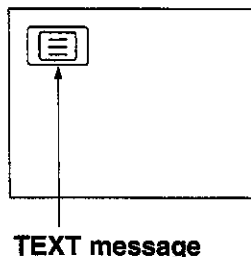

Method (To watch a newflash page)

1



In the text mode, select a newflash page.
e.g. Page No. 155

2



Push the "Display Cancel" Button. The TV screen is switched from the Text page to the normal TV programme.

Every time a newflash information update is available, the newflash information will be displayed at the bottom of the screen.

When that page is found, a message will be displayed at the Top left corner of the screen.


3



Push the "TV/TEXT Selection" Button.

Useful Functions for Teletext (Hold, Reset and Mix)

These functions can be used either LIST mode or F. TEXT mode.

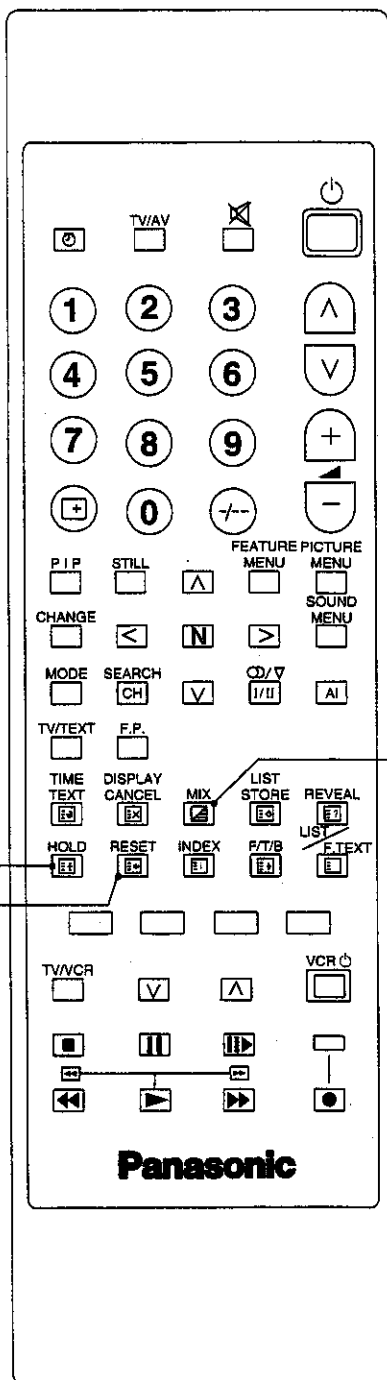


1



Hold Button

The selected teletext page may consist of a number of sub-pages. These sub-pages are rotated automatically, unless the "Hold" function has been activated.

Push this button, and the sub-page will stay on the screen.

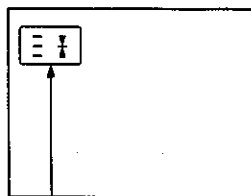

Hold message

The "Hold" message symbol will be displayed at the top left corner of the screen.

To cancel the "Hold", push this button again.

2



Reset Button

Pushing this button in the "F. TEXT" mode will reset the present page to page 40 (100 only for TX-29/33V30XE) and the associated colour subject.

Pushing this button in the "LIST" mode will reset the present page to the "RED" colour coded page number.


3




Mix Button

Push this button, and the Teletext page will appear superimposed over the TV programme.

To revert back to the TV programme alone, push the "TV/TEXT Selection" Button.

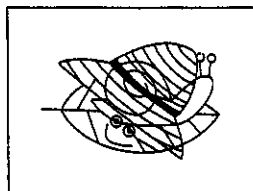

Useful Functions for Teletext (Favourite Page and Reveal)

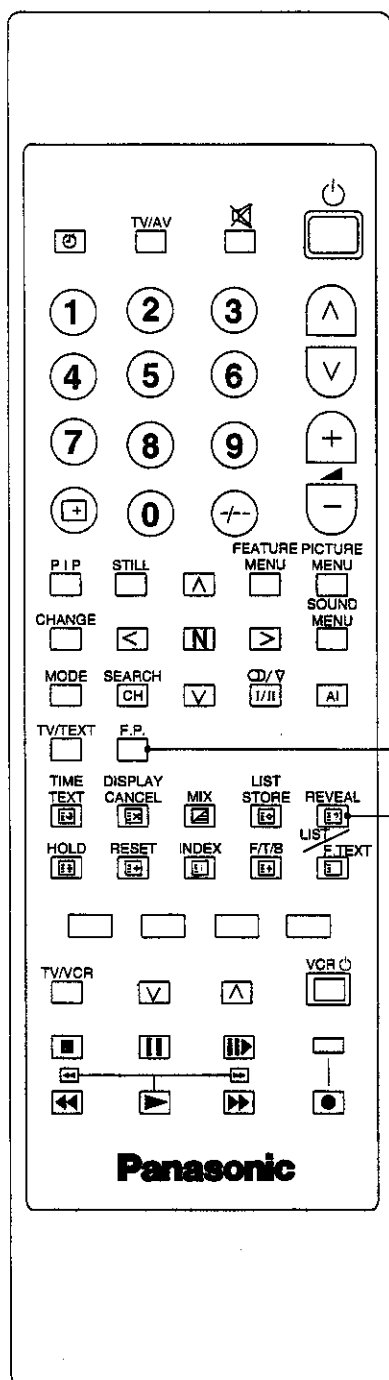

1



 
Favourite Page Selection Button

This feature will store a favorite page in the TV memory and will be instantly recalled when pushed. To store such a page the TV must be in LIST mode and the programme position must be from 1-10 (1 to 25 only for TX-29/33V30XE).

Push the Light Blue button, choose your page number, then push LIST STORE button.

The page number is now stored. Push the F. P. button to recall this page even in TV mode.

2




Reveal Button

Some pages contain concealed information.

e.g. the solution to a riddle or a puzzle.

To reveal this information, push the "REVEAL" Button.

To conceal this information again, push the "REVEAL" Button again.

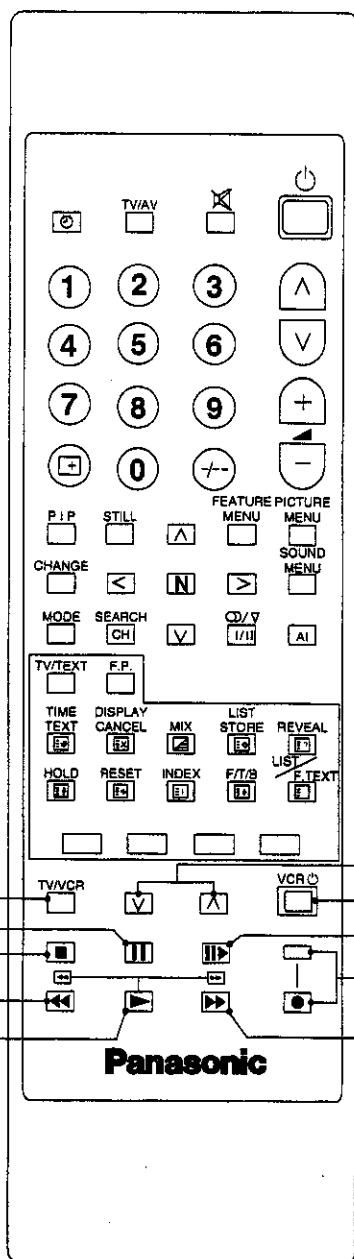


This Remote Control Transmitter is designed to be used with selected Panasonic/National VCRs.

Some model VCRs have different functions, so please refer to the individual VCR instruction booklet to ensure compatibility.

- | | | |
|----|--|----------------------------------------------|
| 1 | | TV/VCR Selection Button |
| 2 | | Pause/Still Button |
| 3 | | Stop Button |
| 4 | | Rew (Rewind)/Review Button |
| 5 | | Play Button |
| 6 | | Programme Number Up and Down Buttons for VCR |
| 7 | | VCR Power Button |
| 8 | | Still Advance Button |
| 9 | | Rec (Record) Buttons |
| 10 | | FF (Fast Forward)/Cue Button |

(Rear Side)

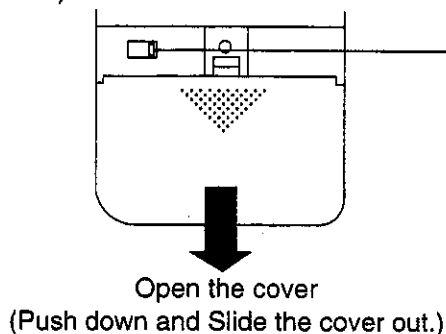



















VCR Mode Select Switch

When used with normal Panasonic/National VCR, set this switch to "6B".


If operation cannot be carried out, set to "8B".

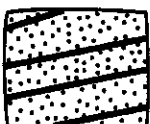Troubleshooting

Before you call for service, determine the symptoms and make a few simple checks as shown below.

Symptoms		Checks
Picture	Sound	
 <p>Snowy Picture</p>	 <p>Noisy Sound</p>	Aerial Location, direction or Connections
 <p>Multiple Image</p>	 <p>Normal Sound</p>	Aerial Location, direction or Connections
 <p>Interference</p>	 <p>Noisy Sound</p>	Electrical Appliances Cars/Motorcycles Fluorescent Lamps
 <p>Normal Picture</p>	 <p>No Sound</p>	Volume (Check whether the mute function has been activated on the Remote Control.)
 <p>No Picture</p>	 <p>No Sound</p>	Not plugged into AC outlet Not switched on Contrast and Brightness/Volume setting (Check by pushing the Power Switch or Stand-by Button on the Remote Control.)
 <p>No Colour</p>	 <p>Normal Sound</p>	Colour Control
 <p>Scrambled</p>	 <p>Normal or Weak Sound</p>	Retune Channels
 <p>Coloured Patches</p>	 <p>Normal Sound</p>	Magnetic interference from unshielded equipment Receiver moved while "ON" Turn the TV set off for 30 mins, using the "Power" Button on the TV set.
 <p>No Colour</p>	 <p>Noisy Sound</p>	Sound System (Refer to page 38) Colour System (Refer to page 39)

For Teletext equipped model only. (TX-25V30X, TX-29V30X, TX-33V30X, TX-29V30XE, TX-33V30XE)

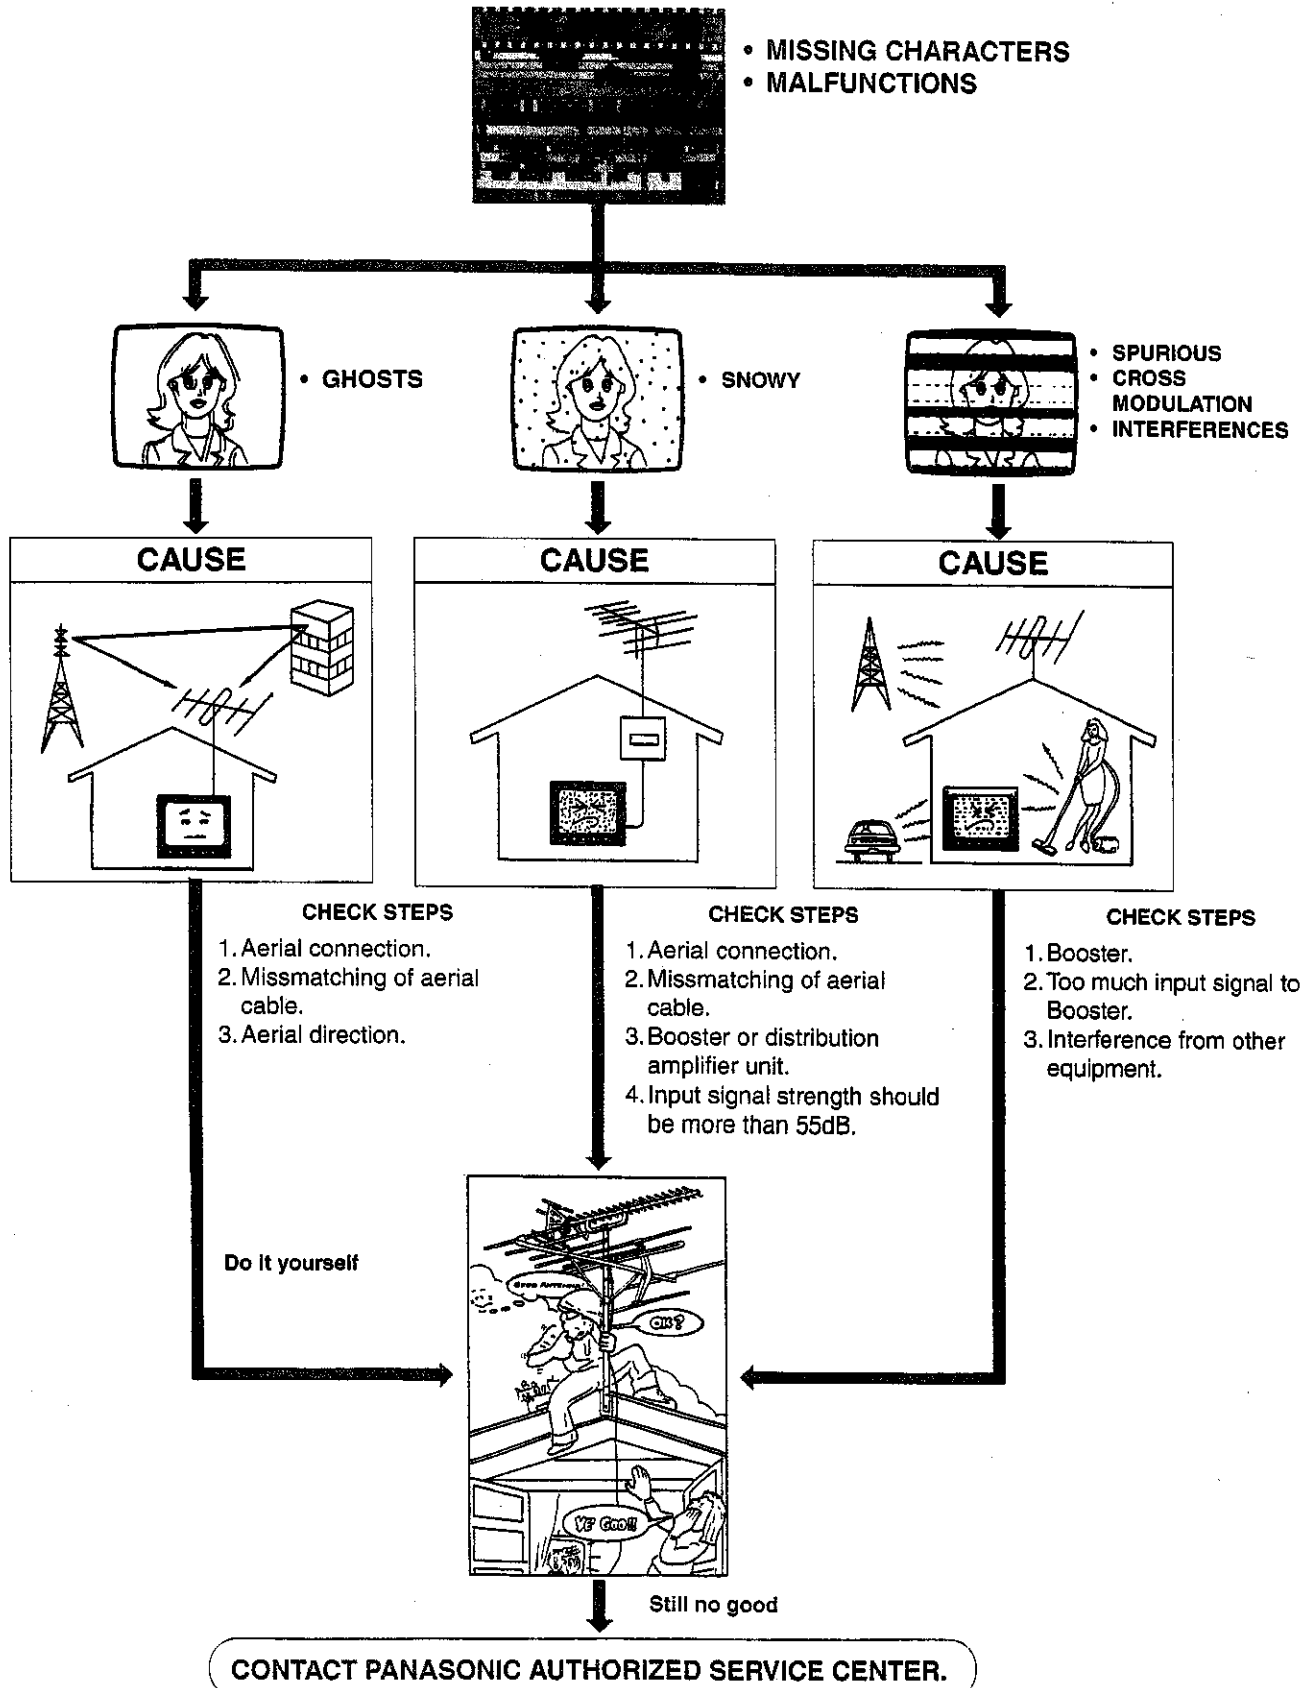

Specifications

Power Source

AC 110-240 V, 50/60 Hz
(TX-29V30XE can only be operated on AC 220 V, 50 Hz)

Power Consumption

TX-25V30 series
TC-25V30 series
185 W
Stand-by condition 16 W

TX-29V30 series
TC-29V30 series
215 W
Stand-by condition 16 W
(Only for TX-29V30XE
195 W
Stand-by condition 10 W)

TX-33V30 series
TC-33V30 series
250 W
Stand-by condition 16 W

Receiving System

21 Systems		Function
1	PAL B, G	Reception of broadcasts and Playback from Video Tape Recorders
2	PAL I	
3	PAL D	
4	SECAM B, G	
5	SECAM D, K	
6	NTSC M	
7	NTSC 4.43/5.5 MHz	Playback from Special Video Tape Recorders
8	NTSC 4.43/6.0 MHz	
9	NTSC 4.43/6.5 MHz	
10	NTSC 3.58/5.5 MHz	
11	NTSC 3.58/6.0 MHz	
12	NTSC 3.58/6.5 MHz	
13	SECAM I	
14	SECAM L	
15	PAL 60 Hz/5.5 MHz	Playback from Special Disc Players and Special VCR's
16	PAL 60 Hz/6.0 MHz	
17	PAL 60 Hz/6.5 MHz	
18	SECAM 60 Hz/5.5 MHz	
19	SECAM 60 Hz/6.0 MHz	
20	SECAM 60 Hz/6.5 MHz	
21	NTSC 50 Hz/4.5 MHz	

Receiving Channels

Regular TV

VHF BAND

2-12 (PAL/SECAM B)
1-11 (AUST. and N.Z.) (PAL B)
1-12 (PAL/SECAM D)
1-12 (NTSC M Japan)
2-13 (NTSC M U.S.A.)

UHF BAND

21-69 (PAL G, I/SECAM G, K)
28-69 (AUST.) (PAL G)
13-56 (PAL D)
13-62 (NTSC M Japan)
14-69 (NTSC M U.S.A.)

CATV

S1-S20 (For TX-29V30XE and TX-33V30XE models only)

Tuning System

Voltage synthesizer

Picture Tube

Overall Picture tube measured diagonally	Type 25 63 cm	Type 29 72 cm	Type 33 84 cm
Viewable Picture tube measured diagonally	59 cm	68 cm	78 cm
CRT Deflection	108°	108°	108°

Audio Output

TX-25V30 series	TX-29V30 series	TX-33V30 series
TC-25V30 series	TC-29V30 series	TC-33V30 series
7W (Max.) × 2	12W (Max.) × 2	12W (Max.) × 2

Headphones

Impedance 8Ω

Aerial Impedance

75Ω Unbalanced coaxial

Video/Audio Terminals

AV 1, 2, 3	S-Video In	Y: 1.0 Vp-p, 75Ω C: 0.3 Vp-p, 75Ω 1 Vp-p, 75Ω Approx. 400 mV 47 KΩ
Monitor Out	Video In Audio In Video In Video Out Audio Out	1 Vp-p, 75Ω Approx. 400 mV 1 KΩ

Accessories Supplied

Remote control
R6 (AA) Battery × 2

Optional Accessories

Top Tray	TX-25V30 series TC-25V30 series TY-TB3	TX-29V30 series TC-29V30 series TY-TB3	TX-33V30 series TC-33V30 series TY-TB3
Set Stand	TY-G25V30	TY-G29V30	TY-G33V30

Dimensions (W × D × H)

TX-25V30 series TC-25V30 series 606 mm × 461 mm × 504 mm	TX-29V30 series TC-29V30 series 668 mm × 513 mm × 551 mm	TX-33V30 series TC-33V30 series 770 mm × 543 mm × 640 mm
----------------------------------------------------------------	----------------------------------------------------------------	----------------------------------------------------------------

Weight (Mass)

TX-25V30 series TC-25V30 series 33.0 kg (Net)	TX-29V30 series TC-29V30 series 43.0 kg (Net)	TX-33V30 series TC-33V30 series 60.0 kg (Net)
-----------------------------------------------------	-----------------------------------------------------	-----------------------------------------------------

Note:

Design and Specifications are subject to change without notice.
Weight and Dimensions shown are approximate.

Customer's Record

The serial number of this product can be found on its rear cover. You should note this serial number in the space provided below and retain this book as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number TX-33V30 series/TC-33V30 series
 TX-29V30 series/TC-29V30 series
 TX-25V30 series/TC-25V30 series

Serial Number _____

Matsushita Electric Industrial Co., Ltd.

Central P.O. Box 288, Osaka 530-91, Japan

Printed in Japan
S0592